

### CAPABILITY LIST

Partnumber	Description	Type No
010-00040-01	see PN 010-10040-01	GA-56
010-00062-00	GPS Receiver	GPS-150
010-00070-22	GPS MAP 225 Receiver	
010-00075-00	GPS 165 TSO	
010-00083-01	GPS MAP 195 Int'l. DB	GPSMAP195
010-00093-02	GPS 80 Arabic Version	GPS80
010-00094-00	GPS 89, w/Int'l Datab/UDGÄET	GPS89
010-00124-02	GPS 25-LP-LVS	GPS25-LP-LVS
010-00125-00	GPS III-Pilot, w/Americas Database	GPSIII PILOT
010-00125-01	GPS III Pilot, w/Int'l database	GPSIII-PILOT
010-00135-00	Transponder GTX-320	GTX-320
010-00135-01	Transponder GTX-320	GTX-320
010-00135-02	Transponder GTX-320	GTX-320
010-00135-03	Transponder GTX-320	GTX-320
010-00135-10	Transponder GTX-320	GTX-320
010-00135-11	Transponder GTX-320	GTX-320
010-00139-11	GNS430 14/28 Volt	GNS-430
010-00157-04	GPS 128	Marine
010-00159-00	GPS 155XL TSO	155XL
010-00168-02	GPS 92, Atlantic Int'l Database	GPS-92
010-00173-11	GPS/Nav Receiver	GNC-430
010-00182-11	GPS Receiver	GNS-530
010-00185-01	GPS III Plus Int'l Atlantic	03-01 Fairpoint
010-00190-20	GPS E-Trex	
010-00200-01	GPS Map 295 Color	GPSMAP295
010-00214-00	GPS Map 176C	
010-00226-01	GPS V	
010-00232-01	GPS Street Pilot III	Mobile
010-00243-01	GPS E-Trex Vista Navigator	eTrex Vista
010-00244-01	GPS 76 Marine Navigator	GPS-76
010-00247-01	Transponder w/Inst.Kit	GTX-320A
010-00249-01	GPS Map 76	GPS-76
010-00301-01	GPS Map 196	GPSMAP 196
010-10040-01	Antenna GA56 TSO	GA-56
010-10052-02	Ant = nyt no: 010-00052-04	GA26
010-10052-03	Use p/n 010-10052-05	GA27
010-10052-04	Antenna Low Profile GA26C	GA26C
010-10052-05	Antenna Low Profile GA27C	GA27C
010-10160-00	Antenna Kit GTX-320	CI-105
010-10274-00	Automotive Mounting Bracket	E-Trex
010-10372-00	CD Mapsource R&R Europa	GPSMap
0101-5059	Helicopter Helmet SPH-5DV	
01-0285055-18	Strobe Light Power Supply	A490A-TS-DF
0104-5059	Helicopter Helmet SPH-5DV	SPH-5DV
01-0770062-03	Strobe Light Power Supply	A490A-TS-CF
010-N0159-00	GPS 155XL N O/H	010-00159-00
011-00010-00	GPS Receiver	GPS-100
011-00019-02	Antenna GPS 95 XL	
011-00054-00	GPS 150	GPS-150
011-00104-00	GPS Reciever	GPS-155
011-00106-00	Brug p/n 010-00075-00	
011-00106-01	GPS Reciever	GPS-165
011-00133-01	Antenna Replacement	GPS-92
011-00280-00	GPS/NAV Reciever	GNS-430
011-00504-00	GPS Reciever	GPS-400

### CAPABILITY LIST

Partnumber	Description	Type No
011-00506-00	NAV Reciever	GNC-420
011-0092-03	GPS Receiver, Handheld	GPS-95XL
011-11147-00	Brug p/n 010-10040-01	GA-56
013-00029-00	Annunciator Control Unit	MD41-428
013-00066-00	Encoder GAE-43 w/ Install. Kit	GAE-43
01442-0104	VHF Rec.Comm/Nav MK12E	MK-12E
0267.015-952	Antenna Vehicular 1A002	1A002
029/321	VHF Transc. FSG-5W	FSG-5W
029-321	VHF AM Transceiver	
03-jan	GPS III Plus se 010-00185-01	Fairpoint
03114-0314	VHF Comm 760ch 14v	COM-810
03114-0315	VHF Comm 760ch 28v	COM-811
03114-0316	VHF Comm 760ch 14v Repl.	COM-810R
03118-0326	VHF Rec.Comm/Nav w/GS 14v	MK-12D
03118-0329	VHF Rec.Comm/Nav Cessna Repl.	MK-12D
03118-0335	VHF Rec.Comm/Nav Repl. 14v	MK-12D/R
03118-0337	VHF Rec.Comm/Nav Repl. 28v	MK-12D/R
03118-301	VHF Rec. Comm/Nav	MK-12D
03118-316	VHF Rec. Comm/Nav MK-12D	MK-12D
03118-328	VHF Rec.Comm/Nav w/GS 28v	MK-12D
03125-0300	VHF Receiver, Handheld	HT-870
03128-0300	Nav Receiver	NAV-122D
03128-0301	Nav Rec. w GPS +Resolver	NAV-122D
03128-0302	Nav Rec. w GPS +Sin/Cos	NAV-122D
03223-0302		MP-10
0344-214-951	Microphone 1PM012	1PM012
0344-214-952	Microphone 1PM012	TG460-05
03606-0300	Transponder	AT150
03606-0304	Transponder	AT150/R
03710-0500		MP-12
3753	See alternative p/n.	AR-850
03753-0300	Encoder Blind 30.700 ft.	AR-850
03753-0302	Encoder Blind 25.000 ft.	AR-850
03753-0304	Encoder Blind 20.000 ft.	AR-850
03753-0306	Encoder Blind 30.000 ft.	AR-850
03754-0300	Emergency Locator Tx ELT-910	ELT-910
050-03402-0000	Inclinometer	
0527.343-925	Digital Ann. & Music System	DP4100-(001)
0527.351-925	Digital Ann. & Music System	DP4100-(002)
0527.361-925	Digital Ann. & Music System	DP4100-(003)
0527.378-925	Digital Ann. & Music System	DP4100-(004)
0543.284-925	Digital Ann. & Music System	DP4100-(005)
0546.763-909	Digital Ann. & Music System	DP-4100
060-00011-0000	Directional Gyro	KG-102
060-00015-0000	Gyro Directional	KG-102A
060-00015-0001	Gyro Directional	KG-102A
060-00016-0000	Gyro Pot	Gyro -101
060-00017-0000	FLT Comand Indicator	KI-256
060-0013-01	Gyro Directional	KSG-105
060-0015-00	Gyro Directional	KG-102A
060-0017-00	Flight Command Indicator, ADI	KI-256
060-0017-01	Flight Command Indicator, ADI	KI-256
062-0009-00	Ground Station	KA-93
062-00142-0100	VHF FM Transceiver	KFM-985
0628-174-591	Casette Test/torque SEL-CT100	SEL-CT100

### CAPABILITY LIST

Partnumber	Description	Type No
064-01023-0000	VHF Transceiver	KTR-908
064-01047-0002	VHF Comm Transceiver	VC-401B
064-01047-0012	VHF TRANSC. VC-401B	VC-401B
064-01051-0010	VHF COMM Transceiver	KY-97A
064-01051-0061	VHF COMM Transceiver	KY-97A
064-01051-0070	VHF COMM Transceiver	KY-97A
064-01052-0010	VHF COMM Transceiver	KY-96A
064-01071-0101	Control Display Unit	KCU-1051
064-01071-0201	Control Display Unit	KCU-1051
064-01071-0301	Control Display Unit	KCU-1051
064-01084-0101	VHF Comm Transceiver SC+	KY-196B
064-01084-0201	VHF Comm Transceiver	KY-196B
064-1005-04	VHF Transceiver	KTR-9100A
064-1005-12	VHF Transceiver	KTR-9100A
064-1005-14	VHF Transceiver	KTR-9100A
064-1009-00	VHF Transc. KTR-905	KTR-905
064-1015-00	HF Transceiver	KTR-953
064-1015-01	HF Transceiver	KTR-953
064-1015-40	HF Transceiver	KTR-953
064-1015-41	HF Transceiver	KTR-953
064-1015-51	HF Transceiver	KTR-953
064-1015-53	HF Transceiver	KTR-953
064-1016-00	HF Control Panel	KCU-951
064-1016-01	HF Control Panel	KCU-951
064-1016-02	HF Control Panel	KCU-951
064-1016-03	HF Control Panel	KCU-951
064-1016-04	HF Control Panel	KCU-951
064-1016-05	HF Control Panel	KCU-951
064-1016-10	HF Control Panel	KCU-951
064-1016-11	HF Control Panel	KCU-951
064-1016-13	HF Control Panel	KCU-951
064-1016-14	HF Control Panel	KCU-951
064-1017-00	HF Antenna Coupler	KAC-952
064-1017-01	HF Antenna Coupler	KAC-952
064-1017-02	HF Antenna Coupler	KAC-952
064-1017-10	HF Antenna Coupler	KAC-952
064-1019-00	VHF Trans. KY-196	KY-196
064-1019-01	VHF Transceiver	KY-196
064-1019-20	VHF Comm Transceiver	KY-196
064-1023-00	VHF Transceiver	KTR-908
064-1023-01	VHF Transceiver	KTR-908
064-1023-02	VHF Transceiver	KTR-908
064-1023-03	VHF Transceiver	KTR-908
064-1023-04	VHF Transceiver	KTR-908
064-1023-05	VHF Transceiver	KTR-908
064-1023-07	VHF Transceiver	KTR-908
064-1023-09	VHF Transceiver	KTR-908
064-1023-11	VHF Transceiver	KTR-908
064-1023-13	VHF Transceiver	KTR-908
064-1023-15	VHF Transceiver	KTR-908
064-1047-02	VHF Comm Transceiver	VC-401B
064-1047-32	VHF Comm Transceiver	VC-401B
064-1053-10	VHF Comm Transceiver	KY-197A
064-1053-11	VHF Comm Transceiver	KY-197A
064-1053-12	VHF Comm Transceiver	KY-197A

### CAPABILITY LIST

Partnumber	Description	Type No
064-1053-30	VHF Comm Transceiver	KY-197A
064-1053-31	VHF Comm Transceiver	KY-197A
064-1053-32	VHF Comm Transceiver	KY-197A
064-1053-60	VHF Comm Transceiver	KY-197A
064-1054-10	VHF Comm Transceiver	KY-196A
064-1054-11	VHF Comm Transceiver	KY-196A
064-1054-12	VHF Comm Transceiver	KY-196A
064-1054-30	VHF Comm Transceiver	KY-196A
064-1054-31	VHF Comm Transceiver	KY-196A
064-1054-32	VHF Comm Transceiver	KY-196A
064-1054-40	VHF Comm Transceiver	KY-196A
064-1054-41	VHF Comm Transceiver	KY-196A
064-1054-42	VHF Comm Transceiver	KY-196A
064-1054-50	VHF Comm Transceiver	KY-196A
064-1054-60	VHF Comm Transceiver	KY-196A
064-1056-01	ATC Transponder	KXP-7500
064-50001-0101	VHF Transceiver 8.33khz	RTA-83A
064-50002-0101	VHF Transceiver 8.33khz	RTA-83B
065-00053-0003	Altitude Alerter	KAS-297A
065-00065-0001	Altitude Alerter	KAS-297B
065-0017-01	Mode Controller	KMC-340
065-00178-0100	Servo, Pitch	KS-270C
065-00178-0200	Servo, Pitch	KS-270C
065-00178-0300	Servo, Pitch	KS-270C
065-00178-2200	Servo, Pitch	KS-270C
065-00178-2300	Servo, Pitch	KS-270C
065-00178-2400	Servo, Pitch	KS-270C
065-00178-2500	Servo, Pitch	KS-270C
065-00179-0100	Servo, Primary	KS-271C
065-00179-0200	Servo, Primary	KS-271C
065-00179-0300	Servo, Primary	KS-271C
065-00179-0500	Servo, Primary	KS-271C
065-00179-0600	Servo, Primary	KS-271C
065-00180-0400	Servo, Trim	KS-272C
065-00180-0600	Servo, Trim	KS-272C
065-00180-1400	Servo, Trim	KS-272C
065-00180-2700	Servo, Trim	KS-272C
065-00180-3500	Servo, Trim	KS-272C
065-0027-01	Servo,	KS-270
065-0028-01	Servo,	KS-271
065-0029-01	Servo,	KS-272
065-0030-00	Mount, Servo	KM-275
065-0031-00	Mount, Servo	KM-276
065-0034-00	Flight Director Computer	KC-295
065-0040-00	Servo,	KS-273
065-0041-00	Mount, Servo	KM-277
065-0052-01	Servo	KS-179
065-0052-16	Servo	KS-179
065-0052-17	Servo	KS-179
065-0052-50	Servo	KS-179
065-0052-51	Servo	KS-179
065-0053-00	Altitude Alerter	KAS-297A
065-0061-01	Servo, Trim	KS-272A
065-0061-19	Servo, Trim	KS-272A
065-0061-21	Servo, Trim	KS-272A

### CAPABILITY LIST

Partnumber	Description	Type No
065-0061-22	Servo, Trim	KS-272A
065-0061-24	Servo, Trim	KS-272A
065-0061-42	Servo, Trim	KS-272A
065-0061-44	Servo, Trim	KS-272A
065-0061-50	Servo, Trim	KS-272A
065-0061-52	Servo, Trim	KS-272A
065-0061-53	Servo, Trim	KS-272A
065-0086-00	Mode Controller	KMC-321
065-0086-01	Mode Controller	KMC-321
065-0086-02	Mode Controller	KMC-321
065-0086-03	Mode Controller	KMC-321
065-0086-04	Mode Controller	KMC-321
065-0086-05	Mode Controller	KMC-321
065-0086-06	Mode Controller	KMC-321
065-0086-07	Mode Controller	KMC-321
065-0086-08	Mode Controller	KMC-321
065-0086-12	Mode Controller	KMC-321
065-0086-13	Mode Controller	KMC-321
065-0086-16	Mode Controller	KMC-321
065-0086-17	Mode Controller	KMC-321
065-0086-18	Mode Controller	KMC-321
065-0086-19	Mode Controller	KMC-321
066-01019-0063	DME Transceiver	KDM-7000B
066-01047-0000	ADF Receiver	KDF-805
066-01060-0048	VHF Nav Receiver	KNR-6030
066-01062-0000	ATC Transponder KT-76A	KT-76A
066-01066-0025	DME Transceiver	KDM-706A
066-01067-0000	Navigation Receiver	KN-53
066-01070-0001	DME Transceiver	KN-63
066-01078-0004	VHF NAV Receiver	KNR-634A
066-01078-0010	VHF NAV Receiver	KNR-634A
066-01078-0011	VHF NAV Receiver	KNR-634A
066-01078-0012	VHF NAV Receiver	KNR-634A
066-01078-0013	VHF NAV Receiver	KNR-634A
066-01078-0014	VHF NAV Receiver	KNR-634A
066-01078-0015	VHF NAV Receiver	KNR-634A
066-01078-0016	VHF NAV Receiver	KNR-634A
066-01078-0017	VHF NAV Receiver	KNR-634A
066-01088-0001	DME Transceiver	KN-64
066-01089-0000	Converter f. DME/GS	KA-120
066-01094-0002	DME Transceiver	KDM-7070
066-01094-0010	DME Transceiver	KDM-7070
066-01130-0000	NAV Converter	KN-40
066-01130-0001	NAV Converter	KN-40
066-01130-0002	NAV Converter	KN-40
066-01130-0003	NAV Converter	KN-40
066-01130-0801	NAV Converter	KN-40
066-01130-0802	NAV Converter	KN-40
066-01141-5101	ATC Transponder	KT-71
066-01141-6101	ATC Transponder	KT-71
066-01146-0101	TCAS II Processor	TPU-67A
066-01146-0201	TCAS II Processor	TPU-67A
066-01148-0101	GPS Receiver KLN-89B	KLN-89B
066-01148-0102	GPS Receiver KLN-89B	KLN-89B
066-01153-0101	Radar Altimeter	KRA-405B

### CAPABILITY LIST

Partnumber	Description	Type No
066-01153-0202	Radar Altimeter	KRA-405B
066-01155-0201	Audio Panel	KMA-26
066-01156-0101	ATC Transponder	KT-76C
066-01160-2501	Flight Management System	GS-2100
066-01160-2502	Flight Management System	GS-2100
066-01160-2601	Flight Management System	GS-2100
066-01160-2701	Flight Management System	GS-2100
066-01160-2801	Flight Management System	GS-2100
066-01174-0101	Multi-Function Display	KMD-150
066-01888-0000	DME Transceiver	KN-64
066-03024-0040	Horizontal Situation Indicator	KPI-552
066-03029-0000	HSI	KI-525
066-03034-0004	VOR/LOC/G.S. Indicator	KI-206
066-03045-0050	PNI	KPI-553
066-03046-0005	HSI	KI-525A
066-03056-0011	Navigation indicator	KI-209A
066-03060-00	Radio Magnetic Indicator	KNI-582
066-03084-0030	Radar Indicator	IN-182A
066-03084-0032	Radar Indicator	IN-182A
066-03084-0033	Radar Indicator	IN-182A
066-04028-0101	Radio Magnetic Unit	RMU-556
066-04029-0101	Data Adapter	KDA-557
066-04031-1121	GPS Receiver KLN-90B	KLN-90B
066-04031-1122	GPS Receiver BRNAV	KLN-90B
066-04031-1221	GPS Receiver	KLN-90B
066-04031-1222	GPS Receiver BRNAV	KLN-90B
066-04031-1321	GPS Receiver	KLN-90B
066-04031-1322	GPS Receiver BRNAV	KLN-90B
066-04031-1421	GPS Receiver	KLN-90B
066-04031-1422	GPS Receiver BRNAV	KLN-90B
066-04031-1521	GPS Receiver	KLN-90B
066-04031-1522	GPS Receiver BRNAV	KLN-90B
066-04031-1621	GPS Receiver	KLN-90B
066-04031-1622	GPS Receiver BRNAV	KLN-90B
066-04031-2121	GPS Receiver	KLN-90B
066-04031-2122	GPS Receiver BRNAV	KLN-90B
066-04031-2221	GPS Receiver	KLN-90B
066-04031-2222	GPS Receiver BRNAV	KLN-90B
066-04031-2321	GPS Receiver	KLN-90B
066-04031-2322	GPS Receiver BRNAV	KLN-90B
066-04031-2421	GPS Receiver	KLN-90B
066-04031-2422	GPS Receiver BRNAV	KLN-90B
066-04034-0101	GPS Receiver	KLN-900
066-04034-0102	GPS Receiver	KLN-900
066-04034-0104	GPS Receiver	KLN-900
066-04034-0201	GPS Receiver	KLN-900
066-04034-0202	GPS Receiver	KLN-900
066-04034-0204	GPS Receiver	KLN-900
066-1016-01	ADF Receiver KDF-800	KDF-800
066-1019-23	DME Transceiver	KDM-7000B
066-1019-67	DME Transceiver	KDM-7000B
066-1023-00	ADF REC KR-85	KR-85
066-1029-00	DME Transceiver	KN-65
066-1029-00/01	DME Transceiver	KN-65
066-1029-03	DME T/R KN-65A	KN-65A

### CAPABILITY LIST

Partnumber	Description	Type No
066-1034-00	ATC Transponder	KT-76
066-1034-01	ATC Transponder	KT-76
066-1034-02	ATC Transponder	KT-78
066-1034-03	ATC Transponder	KT-78
066-1037-00	DME Transceiver	KDM-705
066-1037-01	DME Transceiver	KDM-705
066-1037-04	DME Transceiver	KDM-705A
066-1037-08	DME Transceiver	KDM-705A
066-1039-01	Radar TX/RX KT-45	KT-45
066-1041-00	ATC Transponder	KXP-755
066-1044-00	Marker Beacon Receiver KMR-675	KMR-675
066-1044-01	Marker Beacon Receiver KMR-675	KMR-675
066-1047-00	ADF Receiver	KDF-805
066-1047-01	ADF Receiver	KDF-805
066-1048-00	Radar Alt. T/R	KRA-405
066-1048-02	Altimeter Radar	KRA-405
066-1053-00	Transponder ATC	KT-79
066-1060-49	VHF NAV Receiver	KNR-6030
066-1062-00	ATC Transponder	KT-76A
066-1062-01	ATC Transponder	KT-78A
066-1062-10	ATC Transponder	KT-76A-01
066-1064-00	DME Transceiver	KN-62
066-1066-02	DME Transceiver	KDM-706
066-1066-23	DME Transceiver	KDM-706A
066-1067-00	Navigation Receiver	KN-53
066-1067-01	Navigation Receiver	KN-53
066-1067-02	Navigation Receiver	KN-53
066-1067-03	Navigation Receiver	KN-53
066-1067-04	Navigation Receiver	KN-53
066-1067-05	Navigation Receiver	KN-53
066-1068-01	DME Transceiver	KN-62A
066-1069-00	DME Indicator KDI-572	KDI-572
066-1069-02	DME Indicator	KDI-573
066-1070-01	DME Transceiver	KN-63
066-1071-00	ATC Transponder	KXP-756
066-1072-00	ADF Receiver	KR-87
066-1077-00	ADF Receiver	KDF-806
066-1078-04	VHF NAV Receiver	KNR-634
066-1078-11	VHF NAV Receiver	KNR-634A
066-1078-12	VHF NAV Receiver	KNR-634A
066-1078-13	VHF NAV Receiver	KNR-634A
066-1078-14	VHF NAV Receiver	KNR-634A
066-1078-15	VHF NAV Receiver	KNR-634A
066-1078-16	VHF NAV Receiver	KNR-634A
066-1078-17	VHF NAV Receiver	KNR-634A
066-1088-00	DME Transceiver	KN-64
066-1101-00	NAV Receiver	VN-411B
066-1101-40	NAV Receiver	VN-411B
066-1103-00	ATC Transponder	TR-421B
066-1107-00	DME Transceiver	DM-441B
066-3017-00	Indicator, ADF	KI-225-00
066-3020-05	Flight Command Indicator	KCI-310
066-3024-40	Horizontal Situation Indicator	KPI-552
066-3031-00	Radar Alt Indicator	KNI-415
066-3031-01	Radar Alt Indicator	KNI-415

### CAPABILITY LIST

Partnumber	Description	Type No
066-3032-10	DME Indicator KDI-571	KDI-571
066-3034-00	Navigation Indicator	KI-203
066-3034-01	Navigation Indicator	KI-203
066-3034-02	Navigation Indicator	KI-204
066-3034-03	Navigation Indicator	KI-204
066-3034-04	VOR/LOC/G.S. Indicator	KI-206
066-3034-06	Navigation Indicator	KI-207
066-3034-18	Navigation Indicator	KI-204
066-3034-19	Navigation Indicator	KI-204
066-3034-20	Navigation Indicator	KI-204
066-3034-21	Navigation Indicator	KI-204
066-3034-22	Navigation Indicator	KI-204
066-3034-23	Navigation Indicator	KI-204
066-3035-00	NAV Indicator	KNI-521
066-3038-00	Radio Magnetic Indicator	KI-229
066-3038-01	Radio Magnetic Indicator	KI-229
066-3040-01	Radar Indicator KI-241	KI-241
066-3042-00	RMI KNI-581	KNI-581
066-3042-01	RMI	KNI-581
066-3044-01	Radar Alt Indicator	KNI-416
066-3045-19	Fl. Comp. Indicator KPI-553A	KPI-553A
066-3045-20	Horizontal Situation Indicator	KPI-553A
066-3046-00	HSI	KI-525A
066-3046-01	HSI	KI-525A
066-3046-04core	Add billing / bad core	
066-3046-05	HSI	KI-525A
066-3047-00	DME Indicator	KI-266
066-3054-01	Radio Altimeter Indicator	KI-250
066-3056-00	Navigation Indicator	KI-208
066-3056-01	Navigation Indicator	KI-209
066-3056-02	Navigation Indicator	KI-208
066-3056-03	Navigation Indicator	KI-209
066-3056-10	Navigation Indicator	KI-208A
066-3056-11	Navigation indicator	KI-209A
066-3060-00	Radio Magnetic Indicator	KNI-582
066-3062-00	Encoding Altimeter	KEA-346
066-3063-00	ADF Indicator	KI-227
066-3064-05	Altimeter, Encoding	KEA-130
066-3065-00	Radar Indicator	KI-244
066-3065-00K	Radar Indicator	KI-244
066-3084-32	Radar Indicator	IN-182A
066-3084-33	Radar Indicator	IN-182A
066-3085-30	Radar Indicator	IN-842A
066-3085-31	Radar Indicator	IN-842A
066-3093-00	Multi Function Checklist Unit	CC-2024C
066-3114-00	Radar Indicator	IN-812A
066-3114-01	Radar Indicator	IN-812A
066-4004-00	Nav Converter KN-77	KN-77
066-4008-00	Digital Area Navigation System	KNS-80
066-4010-32	RNAV Receiver	KNS-81
066-4034-0101	GPS Receiver	KLN-900
066-50001-0901	TA / VSI	IVA-81A
066-50001-0903	TA / VS Indicator	IVA-81A
066-50001-1001	TA / VSI	IVA-81A
066-50001-1704	TA / VSI	IVA-81A

### CAPABILITY LIST

Partnumber	Description	Type No
066-50001-1804	TA / VSI	IVA-81A
066-50001-2304	TA / VSI	IVA-81A
066-50001-2404	TA / VSI	IVA-81A
066-50001-2704	TA / VSI	IVA-81A
066-50001-2804	TA / VSI	IVA-81A
066-50001-3104	TA / VSI	IVA-81A
066-50001-3204	TA / VSI	IVA-81A
066-50002-0501	RA / VSI	IVA-81B
066-50002-0601	RA / VSI	IVA-81B
066-50002-0701	RA / VSI	IVA-81B
066-50002-0801	RA / VSI	IVA-81B
066-50002-0901	RA / VSI	IVA-81B
066-50002-8101	RA / VSI	IVA-81B
066-50002-8102	RA / VSI	IVA-81B
066-50012-0101	Marker Beacon	
068-1010-00	DME Range Converter	KDA-1100
068-1010-01	DME Range Converter	KDA-1100
068-1010-02	DME Range Converter	KDA-1100
068-1010-03	DME Range Converter	KDA-1100
069-01024-0000	VHF Nav/Comm Transceiver	KX-155
069-01024-0001	VHF Nav/Comm Transceiver	KX-155
069-01024-0005	VHF Nav/Comm Transceiver	KX-155
069-01024-0038	VHF Nav/Comm Transceiver	KX-155
069-01025-000	VHF Nav/Comm Transceiver	KX-165
069-01025-0005	VHF Nav/Comm Transceiver	KX-165
069-01025-0020	VHF Nav/Comm Transceiver	KX-165
069-01025-0021	VHF Nav/Comm Transceiver	KX-165
069-01025-0024	VHF Nav/Comm Transceiver	KX-165
069-01025-0025	VHF Nav/Comm Transceiver	KX-165
069-01029-0703	VHF Comm/GPS	KLX-135A
069-01032-0101	VHF Nav/Comm Transceiver	KX-155A
069-01032-0201	VHF Nav/Comm Transceiver	KX-155A
069-01033-0101	VHF Nav/Comm Transceiver	KX-165A
069-01033-0201	VHF Nav/Comm Transceiver	KX-165A
069-1019-05	Transceiver, VHF Comm / Nav	KX-175B
069-1020-00	VHF comm/nav Transceiver	KX-170B
069-1025-05	VHF Nav/Comm Transceiver	KX-165
069-1026-00	Portable Vhf Tx/Rx KX-99	KX-99
069-1026-01	Portable VHF KX-99	KX-99
071-00017-0000	Adapter Autopilot	KA-57
071-00073-5000	KCM0100 Configuration Module	
071-00097-0100	Configuration Module	CM-2000
071-00097-1000	Configuration Module	CM-2000
071-00110-0001	Antenna GPS, External	
071-0016-00	DME Hold Adapter	KA58
071-0097-0100	Configuration Module	
071-01048-0000	Antenna, ATC	KA-48
071-01052-0000	Flux Valve KMT-112	KMT-112
071-01055-0000	Adapter Autopilot	KA-52
071-01055-0001	Adapter Autopilot	KA-52
071-01114-0000	Antenna	KA131
071-01133-0000	ADF Antenna	KA-42B
071-01174-0000	Antenna ATC / DME	KA-60
071-01215-0055	VHF COMM Control	KFS-598
071-01234-0000	Antenna w/Amplifier	KA-44B

### CAPABILITY LIST

Partnumber	Description	Type No
071-01242-0001	Slave Control Panel 28v	KA-51B
071-01268-0000	Bus Adapter	KA-594
071-01268-0001	Bus Adapter	KA-594
071-01274-0000	HF Control Unit	KFS-594
071-01282-0000	VHF COMM Control	KFS-598A
071-01282-0024	VHF COMM Control	KFS-598A
071-01282-0046	VHF COMM Control	KFS-598A
071-01282-0047	VHF COMM Control	KFS-598A
071-01282-0048	VHF COMM Control	KFS-598A
071-01282-0049	VHF COMM Control	KFS-598A
071-01282-0050	VHF COMM Control	KFS-598A
071-01282-0051	VHF COMM Control	KFS-598A
071-01282-0052	VHF COMM Control	KFS-598A
071-01282-0053	VHF COMM Control	KFS-598A
071-01282-0054	VHF COMM Control	KFS-598A
071-01282-0055	VHF COMM Control	KFS-598A
071-01282-0056	VHF COMM Control	KFS-598A
071-01282-0065	VHF Control Panel	KFS-598A
071-01282-0086	VHF COMM Control	KFS-598A
071-01282-0087	VHF COMM Control	KFS-598A
071-01282-0088	VHF COMM Control	KFS-598A
071-01282-0089	VHF COMM Control	KFS-598A
071-01282-0090	VHF COMM Control	KFS-598A
071-01282-0091	VHF COMM Control	KFS-598A
071-01282-0092	VHF COMM Control	KFS-598A
071-01282-0093	VHF COMM Control	KFS-598A
071-01282-0094	VHF COMM Control	KFS-598A
071-01282-0095	VHF COMM Control	KFS-598A
071-01282-0096	VHF COMM Control	KFS-598A
071-01283-0012	Nav Control Panel	KFS-564A
071-01283-0015	Nav Control Panel	KFS-564A
071-01283-0028	Navigation Control Unit	KFS-564A
071-01283-0029	Navigation Control Unit	KFS-564A
071-01283-0030	Navigation Control Unit	KFS-564A
071-01283-0031	Navigation Control Unit	KFS-564A
071-01283-0032	Navigation Control Unit	KFS-564A
071-01283-0033	Navigation Control Unit	KFS-564A
071-01283-0038	Navigation Control Unit	KFS-564A
071-01283-0039	Navigation Control Unit	KFS-564A
071-01283-0040	Navigation Control Unit	KFS-564A
071-01283-0041	Navigation Control Unit	KFS-564A
071-01283-0042	Navigation Control Unit	KFS-564A
071-01283-0043	Navigation Control Unit	KFS-564A
071-01284-0019	ADF Control Unit	KFS-586A
071-01284-0020	ADF Control Unit	KFS-586A
071-01284-0021	ADF Control Unit	KFS-586A
071-01284-0022	ADF Control Unit	KFS-586A
071-01284-0023	ADF Control Unit	KFS-586A
071-01284-0024	ADF Control Unit	KFS-586A
071-01284-0029	ADF Control Unit	KFS-586A
071-01284-0030	ADF Control Unit	KFS-586A
071-01284-0031	ADF Control Unit	KFS-586A
071-01284-0032	ADF Control Unit	KFS-586A
071-01284-0033	ADF Control Unit	KFS-586A
071-01284-0034	ADF Control Unit	KFS-586A

### CAPABILITY LIST

Partnumber	Description	Type No
071-01284-0035	ADF Control Unit	KFS-586A
071-01315-0000	Radar Sensor	RS-181A
071-01318-0000	Radar Sensor	RS-181A
071-01318-0010	Radar Sensor	RS-181A
071-01318-0030	Radar Sensor	RS-181A
071-01319-0000	Radar Sensor	RS-861A
071-01378-0000	Radar Sensor	RS-811A
071-01501-0000	Antenna KA-54A	KA-54A
071-01503-0101	TCAS Control Unit	CTA-81A
071-01503-0201	TCAS Control Unit	CTA-81A
071-01503-1301	TCAS Control Unit	CTA-81A
071-01503-1401	TCAS Control Unit	CTA-81A
071-01503-2101	TCAS Control Unit	CTA-81A
071-01503-2201	TCAS Control Unit	CTA-81A
071-01503-2501	TCAS Control Unit	CTA-81A
071-01503-2601	TCAS Control Unit	CTA-81A
071-01503-3801	TCAS Control Unit	CTA-81A
071-01503-3901	TCAS Control Unit	CTA-81A
071-01503-4001	TCAS Control Unit	CTA-81A
071-01503-4201	TCAS Control Unit	CTA-81A
071-01503-5901	TCAS Control Unit	CTA-81A
071-01505-0102	TCAS Graphics Processor	GC-362A
071-01505-0103	TCAS Graphics Processor	GC-362A
071-01505-0203	TCAS Graphics Processor	GC-362A
071-01507-1701	TCAS Control Unit	KFS-578A
071-01507-1801	TCAS Control Unit	KFS-578A
071-01507-1901	TCAS Control Unit	KFS-578A
071-01507-2001	TCAS Control Unit	KFS-578A
071-01507-2201	TCAS Control Unit	KFS-578A
071-01507-2301	TCAS Control Unit	KFS-578A
071-01507-3303	TCAS Control Unit	KFS-578A
071-01507-3403	TCAS Control Unit	KFS-578A
071-01507-3502	TCAS Control Unit	KFS-578A
071-01507-3503	TCAS Control Unit	KFS-578A
071-01507-3603	TCAS Control Unit	KFS-578A
071-01507-4102	TCAS Control Unit	KFS-578A
071-01507-4202	TCAS Control Unit	KFS-578A
071-01507-4302	TCAS Control Unit	KFS-578A
071-01507-4304	TCAS Control Unit	KFS-578A
071-01507-4402	TCAS Control Unit	KFS-578A
071-01507-4404	TCAS Control Unit	KFS-578A
071-01507-4902	TCAS Control Unit	KFS-578A
071-01507-4903	TCAS Control Unit	KFS-578A
071-01507-5002	TCAS Control Unit	KFS-578A
071-01507-5003	TCAS Control Unit	KFS-578A
071-01507-5102	TCAS Control Unit	KFS-578A
071-01507-5103	TCAS Control Unit	KFS-578A
071-01507-5202	TCAS Control Unit	KFS-578A
071-01507-5203	TCAS Control Unit	KFS-578A
071-01507-5503	TCAS Control Unit	KFS-578A
071-01507-5603	TCAS Control Unit	KFS-578A
071-01507-6503	TCAS Control Unit	KFS-578A
071-01507-6603	TCAS Control Unit	KFS-578A
071-01507-6703	TCAS Control Unit	KFS-578A
071-01507-6803	TCAS Control Unit	KFS-578A

### CAPABILITY LIST

Partnumber	Description	Type No
071-01507-8103	TCAS Control Unit	KFS-578A
071-01507-8203	TCAS Control Unit	KFS-578A
071-01507-8303	TCAS Control Unit	KFS-578A
071-01507-8403	TCAS Control Unit	KFS-578A
071-01519-0101	Radar Transceiver	ART-2000
071-01542-0101	TCAS Control Unit	CD-671C
071-01542-0301	TCAS Control Unit	CD-671C
071-01542-0401	TCAS Control Unit	CD-671C
071-01542-0601	TCAS Control Unit	CD-671C
071-01542-0701	TCAS Control Unit	CD-671C
071-01542-0801	TCAS Control Unit	CD-671C
071-01542-0901	TCAS Control Unit	CD-671C
071-01542-1101	TCAS Control Unit	CD-671C
071-01542-1301	TCAS Control Unit	CD-671C
071-01542-1401	TCAS Control Unit	CD-671C
071-01542-1601	TCAS Control Unit	CD-671C
071-01542-1701	TCAS Control Unit	CD-671C
071-01542-1801	TCAS Control Unit	CD-671C
071-01542-1901	TCAS Control Unit	CD-671C
071-01542-2101	TCAS Control Unit	CD-671C
071-01542-2301	TCAS Control Unit	CD-671C
071-01542-2401	TCAS Control Unit	CD-671C
071-01542-2601	TCAS Control Unit	CD-671C
071-01542-2701	TCAS Control Unit	CD-671C
071-01542-2801	TCAS Control Unit	CD-671C
071-01542-2901	TCAS Control Unit	CD-671C
071-01542-3101	TCAS Control Unit	CD-671C
071-01542-3301	TCAS Control Unit	CD-671C
071-01542-3401	TCAS Control Unit	CD-671C
071-01542-3601	TCAS Control Unit	CD-671C
071-01542-3701	TCAS Control Unit	CD-671C
071-01542-3801	TCAS Control Unit	CD-671C
071-01542-3901	TCAS Control Unit	CD-671C
071-01545-0200	Antenna GPS KA91	KA-91
071-01548-0100	TCAS ANT-67A	ANT-67A
071-01548-0200	TCAS Antenna	ANT-67A
071-01549-0100	RDR Vertical Antenna 10"	AA 2010V
071-01549-0200	RDR Vertical Antenna 12"	AA 2012V
071-01550-0101	Radar Transceiver	ART-2100
071-01553-0200	Antenna, GPS. KA92	KA-92
071-01561-0101	TCAS Control Unit	CTA-81D
071-01561-0201	TCAS Control Unit	CTA-81D
071-01591-0001	Antenna ATC / DME	KA-60
071-02007-0000	Audio System	KAA-455
071-1041-01	Converter, 28Vdc-14Vdc	KA-39
071-1043-02	ATC Control	FS-570B
071-1051-00	Radar Antenna	KA-59
071-1052-00	Fluxvalve	KMT-112
071-1053-04	Slav.Control Unit	KA-51A
071-1059-00	Antenna Radio Altimeter	
071-1076-00	RMI Converter KDA-697	KDA-697
071-1174-00	Antenna ATC / DME	KA-60 Se Memo
071-1192-08	ATC CTL Panel	KFS-576
071-120-02	Radar Transceiver	
071-1210-04	ADF Control Panel	KFS-586

### CAPABILITY LIST

Partnumber	Description	Type No
071-1215-38	VHF COMM Control	KFS-598
071-1215-55	VHF COMM Control	KFS-598
071-1216-17	Nav Control KFS-564	KFS-564
071-1220-02	Radar Transceiver	KA-126
071-1220-04	Radar Transceiver	KA-126
071-1234-00	Antenna KA44B w/ampl	KA-44B
071-1242-01	Slav.Control Unit	KA-51B
071-1252-00	HF Antenna (White)	KA-98
071-1252-01	HF Antenna (Olive Drab)	KA-98
071-1274-00	HF/SSB Control Panel	KFS-594
071-1274-01	HF/SSB Control Panel	KFS-594
071-1274-02	HF/SSB Control Panel	KFS-594
071-1274-03	HF/SSB Control Panel	KFS-594
071-1274-04	HF/SSB Control Panel	KFS-594
071-1274-05	HF/SSB Control Panel	KFS-594
071-1283-12	Navigation Control Unit	KFS-564A
071-1284-04	ADF Control Panel	KFS-586
071-1285-00	Radar Transceiver	KA-128
071-1316-00	Antenna Radar 10 inch	AA-5510B
071-1317-00	Antenna Radar 12 inch	AA-5512B
071-1318-00	Radar Sensor	RS-842A
071-1318-30	Radar Transceiver	RS-841A
071-1328-00	Antenna Radar 10 inch	AA-5518B
071-1345-09	ATC Control Panel	CD-422B
071-1350-04	DME Selector Display	SD-442
071-1376-00	Radar Control Panel	CP-103F
071-1377-00	NAV Control Panel	CD-413B
071-1378-00	Radar Transceiver	RS-811A
071-3114-00	Radar Indicator	IN-812A
0715-174-286	Control Head	ATC-2000
0812.064-952	Antenna Ground Plane 1A049, 116-152 MHz	TG460-05
0868-541-910	VHF Com	AR4201
0878-170-955	Temp. Sensor	1K043
0879.800-918	Remote Contr.FB460-1 Multiwire	TG-460
0881-910-926	VHF Basestation TG460-10	TG-460-10
0884.456-918	Remote Control FB460-2	FB460-2
0884.561-923	VHF/AM Tx Mobile GK415/AR4201	GK415/AR4201
0889.407-918	Filter Notch / Rmt. Ctrl. FB460-2	
0889.423-918	Combiner FB460-2 4 Conn.	VT460-4
0889-997-923	VHF Tranceiver Mobile	GK-415
0900-0242-00	Stanby Power Unit	SPU-28/12-RM
0900-0725-00	NAV Reciever	TX-720
0900-0727-10	NAV Reciever	TNX-920
0900-0728-00	NAV Reciever	TNX-960
0900-1840-00	Emergency Power Unit	EPU-28/24-RM
0900-1840-22	Emergency Power Unit	EPU-28/24-RM
0900-4099-01	Alt. Digit. AT-3000Terra	AT-3000
097768-0200	ATC Transponder	1014B
100170	Magazine, Flight Data Rec.	100170
10070-1	CDI GNS-500A	GNS-500A
100TRA	Microphone Hand	62800-001
101001-A10	Audio Sel. Pnl DE101-10	DE101-10
101011	Acc. meter	101011
10-1178-53	Passenger Service Unit	10-1178-53
101-380012-5	Light Dimmer	LT-55

### CAPABILITY LIST

Partnumber	Description	Type No
10-20206	Antenna, Glideslope	37P-4
10-202-1	VHF NAV Antenna	
10-203-1	Antenna H.R.Smith	
10-203-4	Antenna DME	
10-204-1	Glide Slope Antenna	
102200-01852	Altimeter Encoding	
10-258-3	Ant Active Dipole (pair)	
1033646	Headset, Encore Binaural	f/BeoCom2100
10-60137-24	Mask Oxygen, Passenger	
10-60137-57	Mask Oxygen, Passenger	
10-60757-24	Indicator 124.834	124.834
10-60757-25	Frequency Meter	124.835
10-60757-27	AC Anmeter	124.837
10-61096-58	Detector	
10-61219-33	Indicator Fuel Qty	
10-61311-3	Antenna	DMN150-2-1
10-61330-61	Caution Light, Master	10-61330-61
10-614960-2	Stator ECG	
10-61833-1	Temp. Ctrl. Window	
10-61833-4	Heat Control Window	
okt-62	Audio Panel	
10-62090-30	Cockpit Speaker	5142-1
10-62090-60	Audio Control Panel	10-62090-60
10-62090-61	Audio Control Panel	10-62090-61
10-62090-64	Audio Control Panel	10-62090-64
10-76618	Scale f/ignition analyzer	
10841B	Oil Cooler	10841B
110-318	Antenna ELT	
110-324	Antenna ELT	
110-328-01	Antenna ELT	
11-118-00	Accelerometer CA118	
11126-7	Temp.Control Unit	11126-7
1117-11	Control Display Unit	UNS-1L
1121S-10-7	Valve	
1121S2-10-7	Valve	
1121S2-10-9	Valve 1121S2-10-9-5	
11-3544-11	Board Assembly	
11-3544-21	Board Assembly	
11-3544-31	Board Assembly	
1151324-1	Emergency Beacon	Rescu-406
1151816-1	Mounting Bracket	
1152794-1	Emergency Beacon	Rescu-406
1152890-1	Emergency Beacon	Rescu-406
1152892-1	Emergency Beacon	Rescu-406
1167003-141	Controller Entertainment	
1173T10-1	Switch ACM Temperature	
118-00	GPS Street Pilot Colour	
121-017686-01	GPS Antenna	GPS-ANT
dec-17	Antenna	
121CC01A	Contacto	
dec-22	Antenna	
124-1062	Indicator Battery Temp.	
124-552-2	Indicator, Oil Temp.&Press.	124.552-2
124552-2	se part no: 124-552-2	124.552-2
124-834	Indicator 10-60757-24	124.834

### CAPABILITY LIST

Partnumber	Description	Type No
124-835	Meter Frequency	128.435
124-837	AC Ammeter, Indicator	124.837
124-845-1	Voltmeter A.C.	
12507G-10	Headset	H10-30
12507G-18	Headset	H10-40
12507G-42	Headset	H10-13.4
12507G-46	Headset	H20-10
12515G-12	Headset H-3312	H-3312
129118-5	Thermostat	
12948G-05	Microphone M-1/DCA	
13-00029-00	Annunciator Control Unit	
1343-1	Ballast 60B40025-43	
1372-1-5	RPM Detector	1372-1-5
1379139C402	Cockpit Window	
13824-02-0109	GPS Receiver	TNL-2000
13824-03-0311	GPS Receiver	TNL-3000
13824-12-0234	GPS Receiver	TNL-2000A
1394T100-7Z	Turn Coordinator	
14007-0346	Pack II MK12D+ / ID825	
14141-0252	Navigation Management Unit	GNS-X NMU
14141-0252-3173	Navigation Management Unit	GNS-X NMU
15-0069-17	Light Reading	
15-0069-23	Light Reading Grimes	
15-20	ADF Mast	
15-21	Antenna, ADF Mast	
155001-00	Audio Panel Delta	DE155-00
1552-002-3	Regulator	
157510-0001-003	CDU	TNL-8100
159710-0001-004	CDU	TNL-8100
159710-0101	TA7900 CDU 159710-0101-002	
159710-0101-006	CDU, Arinc, Grey	
1600A	Audio CTL Panel	1600A
16248-20	GPS Antenna	
1630-1	Audio Control	1630-1
1652-0101	Remote Antenna f/ELT10	
165RC01WC	Flasher	
171001-10	Co.Panel DE171-10	
171209-01	Pass. Control Unit	
1719694-503	Antenna Pedestal	AP-4001
1719694-504	Antenna Pedestal	AP-4001
1719694-509	Antenna Pedestal	WA-800
1719694-510	Antenna Pedestal	AP-4001
1719694-511	Antenna Pedestal	AP-4001
171980-01	Pass. Control Unit	
171981-01	Pass. Control Unit	
171981-02	Pass. Control Unit	
172809-01	Pass. Control Unit	
172934-001	Switch Selector	
17343-61-450	Fire Detector Fenwall/Fairchild	
1783867-1	Servo Amplifier	
1783867-11	Servo Amplifier	SE-111
1784389-653	RMI	C6J
1822-1	Light Dimmer	
18283G-02	Headset *** se pn H10-56***	H10-56
18334-31	Antenna f/Flightmate Pro	

### CAPABILITY LIST

Partnumber	Description	Type No
18340907-1	Pressure Indicator	
18486G-01	Intercom Amplifier	ISOCOM
18801-5-380	Detector Airflow	
18-994	Inverter	18-994
18-996	Inverter	18-996
1900-0242-00	Standby Power Unit	SPU-28/12-RM
1900-0259-10	Alt. Encoder	78758-4534
1900-0350-10	NAV Reciever	TN-200D
1900-0579-00	Course Deviation Indicator (CDI)	TRI-NAV
1900-0580-00	Course Deviation Indicator (CDI)	TRI-NAV-C
1900-1713-10	Transponder	TRT-250
1900-5155-00	Channel Sel.Sw. f/TPX10B Terra	
19689	Transducer TA-136	TA136
19689-1	Transducer TA-136	TA-136
1977-1	Lamp Dimmer	
1990554-4	NAV Control Panel	
19911-1B	Vertical Gyro	19911-1B
19911-1C	Vertical Gyro	19911-1C
1A049	Antenna - use p/n 0812.064-952	
1A1050-1A	Inverter Static	
1A250-1B	Inverter AC	
1A700-10	Inverter	1A700-10
1A700-1C	Inverter	
1B350-1B1	Inverter Static	
1B350-1B1-3	Inverter Static	
1B495-4	Valve Flux Magnetic	
1B800-1G	Inverter	1B800-1G
1C359-1	Wing Leveler	
1H00-121	Switch	
1U262-003-14	Gyro Directional 4000C	4000 C
1U453-002	Com Control Panel	
1U458-001	ATC Control	
1U460-001	Audio Control Panel	
2010056-242	Indicator Course Deviation	
2010056-42L	Indicator Course Deviation	MD40-42L
2010056-66L	Indicator Course Deviation	MD40-66L28
2039124-0501	Transmitter	
2041166-5204	Radar Altimeter ALA-52A	ALA-52A
2041217-0413	RDR Transc RTA-4A	RTA-4A
2041217-0415	Receiver RTA0004A	RTA0004A
2041220-0401	Radar Cont. Unit CON4B	CON-4B
2041234-3401	VHF/NAV Receiver	RNA34A
2041234-3415	VHF/NAV Receiver	RNA34A
2041444-0406	Antenna Drive DAA-4A	
2041683-7504	Antenna ADF ANA0075B	
204KOS670	Overheat Switch	
2067157-0103	Radar Transc. RDR-1E	RDR-1E
2067557-7305	Ant.Coupler CMA73A-78	CMA73A-78
2067631-0506	Radio Altimeter	
2068364-0701	Magnetron	
2070122-0501	Antenne Coupler	
2070122-0502	Antenne Coupler	CMA-73D125
2070409-0101	Radar Antenna	
2070484-5107	Radio Altimeter	
2070677-7401	ADF Receiver DFA-74A	DFA-74A

### CAPABILITY LIST

Partnumber	Description	Type No
2087821-2811	Marker Receiver MKA-28C	MKA-28C
209-4675	Powerline 4 Batterilader	
2095D01	Pump Fuel Booster	
20ICM7	Radio, Maritim	
2101UPGR240B	TNL2101 APP PLUS UPGRADED	
2101UPGR241B	TNL2101 I/O PLUS UPGRADE/3100	
2105A	RMI	
2105A-6	RMI	
210963	Governor O/S	
21102M372M	Indicator	
21-14-2	Antenna	
212-34-90R2	Audio Box	
2156-204A	Smoke Detector	
2156-2B	Smoke Detector	
2156-604	Smoke Detector	
218D3	Control Unit	
2222601	Flight Data Acquisition Unit	
2222601-6	Flight Data Acquisition Unit	
2228401-4	Flight Data Entry Panel	70-252E
229-9015-010	Altitude Control	590A-6
2311M51-1	Motor Wiper	XW20173-M1
233T3233-10	Panel	
233T6201-21	Panel	
23-501-016-1	Attitude Gyro	5000B-33
23989-011	Altitude Alerter	540
24104	Switch	
24-11201010	Microphone Desk	
25001-00311	CVR Control Panel	25001-00311
25050-001	Altitude Alerter	540
25100-002	Altitude Alerter	
251-6715	Netadapter	
2558A000	Valve Bleed Air Shut Off	
2585268-0102	Radar Indicator	PPI-1G
2587193-23	Gyro	C-14
2587193-43	Gyro, Directional	C-14A
2588302-4	Gyro Directional	DG-206A
2589419-901	Valve Flux	
2590624-942	Mode Selctor Panel	
2591411-444	Horizon Fl. Dir.	HZ-444
2592624-901	Amplifier	
2592920-444	HSI	RD-444
2593037-901	Roll Logic	
2593131-903	Module	
2593564-917	Altitude Selector Contr.	
2594484	Flux Valve	FX-220
2594625-903	Radio Magnetic Indicator	
2607949-1	Wheel Half Assy	
267-961-001	Indicator, Torque	
26V10TT4B01	Transmitter	
270-0859-010	Altitude Control	590A-6A
270-2424-010	Turn and Bank Indicator	329T-1
27-82174	Ann. Panel	
27-82174-109	Annun. Panel	
2-79461/A	V/ UHF T/R	RT-651C
2800-0012-105	SelCall Decoder	Jet Call-5

### CAPABILITY LIST

Partnumber	Description	Type No
285N0412-3	Hand Set	
285T0001-37	ACCY, Audio	
285T05248	ILS Controller	
285T0553-4	ILS Control Panel	
28656-002	Nav. Battery	
289-5M3	Gyro Directional Slaved	289-5M3
289-701-209	Mask Oxygen, Passenger	
289-701-9	Mask Oxygen, Passenger	
2-899-111	Card, Proximity	
291SP017	Microphone Hand	
291SP017-03	Pre-Amplifier Board	
2944T100-1	POWER DRIVE UNIT TELAIR	
2A059-0171	Rail Crew Seat	
2C900/2	Handset	2C900/2
2CM70D6A	Gennerator	
2CM9ABY7	Tacho Generator	
2HIL16	Coupling	
2K25	Klystron	
30-0837-5	Strobe Anti Collision Light	30-0837-5
30-1033-5	Beacon	
30110	P.A.Amplifier	
30-1136-1	Strobe Light	
30-1192-9	NAV Light Assy	30-1192-9
30-1521-6	Rear Pos. Light	
30-1809	Unit	
30-1809-1	Strobe Light	
30-231-9	Smoke Detector	
30459-00000	Control Box	
305154-00	Encoder SAE5-35 w/ Install. Kit	SAE5-35
309-401	Magazine, Flight Data Rec.	309-401
30E02-27A	DC Generator	
3100130	Transmitter Oil Press.	
3118262-01	Oil Cooler	3118262-01
3121-01	Power Supply, Emerg. Lgt.	3121-01
31-3038-1	Light Subassy	
3137L-B-2-1-C	Radio Magnetic Indicator	3137L-B-2-1-C
3137L-B2-1C	Radio Magnetic Indicator	3137L-B2-1C
3137L-B6-3C	Radio Magnetic Indicator	3137L-B6-3C
3-1438-1	Nose Wheel Goodrich	
3-1439-3	Main Wheel Assy	
32005-007	Tach Generator	
3201KGA/CP/1	Tacho Generator	
3202176-2	Check Valve	
3202KGA/MS/1	Tacho Generator	
32200-3	Motor	
32470-002	Temp.Sensor	
3247-30	Ballast	D1347
3247-40	Ballast	D1347
32760-202	Indicator Airspeed	530
3299-1	Toilet Timer Reversing	3299-1
3314	Shaft Assy	
331A8G	Course Indicator	331A-8G
331A-8K	H.S.I. 77-1397-002	331A-8K
3320-00011	Tachometer	
332D11A	Vertical Gyro	332D-11A

### CAPABILITY LIST

Partnumber	Description	Type No
339F-12A	Indicator, DME	339F-12A
01-01-07	Cup	
34403-30A22	Transmitter Oil 34403-30A22-1	
3505436-6-1	Starter, Air Turbine	
350880-6	Pump	PV3-240-2F
35-378-1013	Audio Warning Unit	
35-42313-0006	Lever, assy RH	
3567709-7202	Pressure Transmitter	7709-55-B8
36126-1AF25M1	Radio Magnetic Indicator	36126-1AF25M1
3614004-4101	VHF Nav Rec.	VN411B
3614009-4201	ATC Transponder	TR-421B
3614013-4301	ADF Receiver	DF-431B
3614019-4401	DME Transceiver	DM-441B
3614165-5510	Antenna Radar 10 inch	AA-5510B
3614165-5512	Antenna Radar 12 inch	AA-5512B
3614165-5518	Antenna Radar 18 inch	AA-5518B
3614276-1033	Radar Control Panel	CP-103A
3614278-1111	Radar Control Panel	CP-113F
3614311-1002	Symbol Generator	SG-101A
3614335-1002	Symbol Generator	SG-101B
3614335-1015	Symbol Generator	SG-101B
3614335-2016	Symbol Generator	SG-101B
3614475-8601	Radar Sensor	RS-861A
3614863-8401	Radar Sensor	RS-842A
3614863-8410	Radar Sensor	RS-842A
3614863-8430	Radar Sensor	RS-842A
3614882-8430	Radar indicator	IN-842A
3614882-8431	Radar indicator	IN-842A
362-04270	Batt for UWLB p/n ELP-362D	
3713407-508	Antenna Pedestal	WA-800
3713756-501	Radar Transmitter	WU-1001
3713757-501	Radar Indicator	DI-100X
3713878-502	Radar Transceiver	RT-3002
3714458-501	Card Assy CCT Conv.	
3714518-501	Radar Transmitter & Antenna Assy	WU-1002
3714606-501	Wave Guide	
3714752-507	Radar Indicator	DI-4002
3714752-508	Radar Indicator	DI-4002
3715752-501	Radar Transceiver	WR-800
3718389-3	Magnetron	
3718649-001	Antenna Plate	
376AS15	Lamp	
37R-2	VHF Antenna 522-1135-012	
389-552-289	Controlhead AR3201	
3930026-092	Indicator Fuel Qty	
393004-060	Indicator Fuel Qty	
393004-061	Indicator Fuel Qty	
393026-003	Indicator Fuel Flow	
393026-03335	Indicator Fuel Qty	
393026-037	Indicator Fuel Qty	
397-253	Panel	
3A51.32.35F.00.0F	Altimeter	
3D2353-06	Valve Ejector Flow Control	
3PL-181-198	Fan	
3S2060DC168A2A	Generator Control Unit	

### CAPABILITY LIST

Partnumber	Description	Type No
4000-10	Emergency Locator Transmitter	
4000-11	Emergency Locator Transmitter	
4000223-1201	Radar Indicator	IN-112
4000393-0101	ADF Receiver	ADF T-12D
4000401-4102	VHF Transceiver	RT-241A
4000401-4103	VHF Transceiver	RT-241B
4000401-4104	VHF Transceiver	RT-241A
4000401-4105	VHF Transceiver	RT-241B
4000404-4401	Indicator VOR/LOC	IN-244A
4000502-0101	Radar Transceiver	RT-1201A
4000503-0201	Radar Indicator	IN-1202A
4000503-0203	Radar Indicator	IN-1202A
4000503-0204	Radar Indicator	IN-1202A
4000503-0205	Radar Indicator	IN-1202A
4000504-0301	Radar Antenna Drive	DA-1203A
4000504-0302	Radar Antenna Drive	DA-1203A
4000525-1212	Radar Antenna Array	
4000763-3101	Radar TR/TX RT-131A	RT-131A
4000831-0101	Radar Transceiver	RT-1401B
4000831-0103	Radar Transceiver	RT-1401B
4000831-0105	Radar Transceiver	RT-1401B
4000831-0106	Radar Transceiver	RT-1401B
4000946-5201	Radar Indicator IN-152A	IN-152A
4000966-0109	Radar Transceiver	RT-1301B
40-0100-1	Beacon	
4001018-6108	ANT/RT ART-161A	ART-161A
4001098-0201	Radar Indicator	IN-1202B
4001291-2103	Radar Indicator	IN-2021A
4001373-2204	Radar Indicator IN-2022A	IN-2022A
4001670-2501	Radar, Colour Indicator IN-2025A	IN-2025A
4001670-2511	Radar Indicator	IN-2025B
4001670-2513	Radar Indicator	IN-2025B
4001921-5101	Radar Transc. RT-1151A	RT-1151A
4001922-5201	Radar Indicator	IN-1152A
4001976-0701	Radar Interface Unit	RDR-1500
4001976-0702	Radar Interface Unit	RDR-1500
4001976-0751	Radar Interface Unit	RDR-1500B
4001976-0752	Radar Interface Unit	RDR-1500B
4004	Ground Station Park Air	4004
4004437-901	Radio Altimeter	RT-220
4005123-901	Altimeter	
4007637-001	Antenna Radio Altimeter	AT-221
4008519-902	Autopilot Computer	SP-200
4008519-923	A/P Computer	SP-200
40217G-01	DCNC Headset	
4024993-901	Controller ATC	4024993-901
4024993-902	Controller ATC	4024993-901
4029377-914	A/P Computer	SP-600
402EED1-3	Standby Engine Indicator	
4033169-902	HSI	
40363	Hydr. Pump.	AP05VC-067
4037132	Light Taxi	
4039940-901	ECA Module	
40468G-01	Intercom	COM-200
40495G-01	Headset	

### CAPABILITY LIST

Partnumber	Description	Type No
40-618-4	Indicator Stab. Trim	
406-2	Homer System	
406-2-28V	Homer	
406-6010-904	TCAS Computer	
4067241-860	Indicator, VSI/TRA	DV-910
40678-2	Battery Main	40678-2
407-001-2	Indicator	
4078-2	Battery Main	4078-2
407DT8	Valve	
41-1457-1	Tube Drain	
41420-1128	Transponder	RT-359A
4173763	Landing Light Extensible	
41SG165-1	Switch/Transducer Consol. Contr.	
41SG265-1	Switch/Transducer Consol. Contr.	
42-307-1	Anti Skid Control	
42540-3228	Altimeter Encoding	EA401A
42-629-1	Anti Skid Control	
437X1A	Antenna 522-4255-001	
44410-2-24	Rotating Beacon	44410-2-24
44410-2-4	Beacon	
446025	SW Receiver Handheld	ATS606A
446085	Antenna for ATS606A	ANT60
448D000-2	Handset 78711	78711
448D300-1	Handset	
45-0068-1	Landing Light	
452-0114	Battery ELS-10	ELS-HM
4524-3002	Transducer GULL	
453-0001	ELT Trans. ELT B121-0	B121-0
46660-1001	Receiver Transc.	RT-385A
472017	ITTemp Ind. Cessna 9912049-4	
4723A	Altitude Control	4723A
4791	Motor	
490T-1	HF Tuner 522-3443-000	490T-1
500DCF (28)	Horizon Reference Indicator	500DCF (28)
500DCK(28)	Horizon	500DCK(28)
500ED	Horizon Reference Indicator	500ED
500-ED	Horizon 1ph. 115 vac	500-ED
501-1228-01	Power Supply, Emergency	PS-835A
501-1228-02	Power Supply, Emergency	PS-835B
501-1228-03	Power Supply, Emergency	PS-835C
501-1228-04	Power Supply, Emergency	PS-835D
501-1228-05	Power Supply, Emergency	PS-835E
501-1228-06	Power Supply, Emergency	PS-835F
502/2	Monitor Battery Temp.	
503-347-995	NR-200	NR-200
504-0001-920	Horizon	300-11A
504-0010-907	Horizon	500 DC (BELL)(5)
504-0017-913	Horizon	510-17A
504-0017-916	Gyro Horizon	510-8B
504-0017-917	Attitude Gyro	510-8C
504-0017-921	Horizon	510-8D
504-0017-924	Attitude Gyro	510-8G
504-0028-904	Horizon	510-22D
504-0035-905	Attitude Gyro	AIM 520-2A
504-0035-914	Attitude Gyro	AIM 520-4AG

### CAPABILITY LIST

Partnumber	Description	Type No
50400-501	Module	
504-025-393	no longer available	r/b 673-371-393
504-5612-003	Antenna, Glideslope	37P-2
50652-1	Transmitter Hydraulic Pressure	
509-0001-504	Turn and Bank Indicator	329T-1 ( COLLINS )
509-0001-915	Turn and Slip Indicator	TS200-4 BL
01-01-91	Audio Panel	01-01-91
510-3520-001	Inverter	
05-07-07	Core Assy Inner	
5120-6	Indicator, Devi	5120-6
5140-1	Remote Electrics Units	5140-1
01-01-40	Remote Electrics Units	01-01-40
5142-1	Cockpit Speaker	10-62090-30
5145-1-60	Audio Control Panel	5145-1-60
5145-1-61	Audio Control Panel	5145-1-61
5145-1-62	Audio Control Panel	5145-1-62
5145-1-64	Audio Control Panel	5145-1-64
5145-49-44	Edgelit / PCB Assembly Avtech	
51653-120	Control Unit GRAVINER/EXCHANGE	
01-01-90	Audio Remote Elec. Unit	01-01-90
519-28702-552	Altimeter	
51Y-4	ADF Receiver	51Y-4
51Y-7	ADF Receiver 777-1492-004 OHC	51Y-7
520-3137-304	Radio Magnetic Indicator	3137L-B6-3C
520-3137-307	Radio Magnetic Indicator	3137L-B2-1C
520-3337-203	Radio Magnetic Indicator	D3337L-B6-1C
520-3337-213	Radio Magnetic Indicator	D3337L-B6-1C
5205300002	Course Deviation Indicator	5120-6
520-7137-014	Radio Magnetic Indicator	520-7137-014
522-0027-003	Antenna, Glideslope	37P-3
522-0027-113	Antenna, Glideslope W/o Adapter Plate	37P-3
522-0688-003	Antenna, Glideslope	37P-4
522-0688-013	Antenna, Glideslope	37P-4
522-0688-133	Antenna, Glideslope	37P-4
522-0700-003	Antenna, Glideslope	37P-5
522-0700-043	Antenna, Glideslope	37P-5
522-0700-23	Antenna, Glideslope	37P-5
522-0769-014	ADF Receiver	51Y-3
522-0854-003	Antenna, Mrk. 37X-2	37X-2
522-0875-006	P.A.Amp. 346D-1	346D-1
522-1135-011	Antenna. VHF Comm	37R-2
522-1135-012	Antenna. VHF Comm	37R-2
522-1136-011	Antenna, VHF 137X-1	137X-1
522-1136-014	Antenna, VHF 137X-1	137X-1
522-1501-000	HF Transceiver	618T-2
522-1836-00	ADF Receiver	51Y-4
522-1836-000	ADF Receiver	51Y-4
522-2213-038	HF Ctl Panel	7,14E+00
522-2357-000	ADF CTL 614L-8	614L-8
522-2447-205	VHF Control Panel	313N-2
522-2447-560	VHF Control Panel	313N-2D
522-2447-563	VHF Control Panel	313N-2D
522-2450-014	VOR/ Receiver	51RV-1A
522-2450-016	NAV Receiver	51RV-1
522-2450-114	Nav Receiver	51RV-1

### CAPABILITY LIST

Partnumber	Description	Type No
522-2450-115	NAV Receiver	51RV-1
522-2457-037	HF Ctl. 714E-3	7,14E-01
522-2615-005	ADF Antenna	137A-6
522-2632-000	ATC Antenna	237Z-1
522-2638-006	HSI	331A-3G
522-2638-007	HSI 331A-3G	331A-3G
522-2644-011	Slaving Assesory	328A-3G
522-2646-000	Antenna. VHF Comm	37R-2A
522-2646-014	Antenna. VHF Comm	37R-2A
522-2702-014	DME Transceiver	8,60E+00
522-2702-053	DME Transceiver	8,60E+00
522-2702-062	DME Transceiver	6,80E+04
522-2703-001	ATC Transponder	621A-3
522-2703-011	ATC Transponder	621A-3
522-2736-004	Compensat 582A-2	582A-2
522-2741-004	Computer ADF	582A-12
522-2899-000	Audio Control Panel 387C-4	387C-4
522-2996-011	Marker Receiver	51Z-4
522-3120-004	Instrument Amplifier	344C-1D
522-3120-005	Instrument Amplifier	344C-1D
522-3121-196	Steering Computer	562A-5F
522-3159-000	HF Coupler	180R-12
522-3207-003	Flight Computer	562A-5G
522-3375-004	HF Coupler Control Unit	309A-9
522-3443-000	HF Antenna Coupler	490T-1
522-3551-001	Control, Pitch -Turn	6,14E-02
522-3614-206	Radio Control Panel	313N-4B
522-3614-506	Radio Control Panel	313N-4B
522-3617-000	VHF Control Panel	313N-5A
522-3617-003	Control Panel	313N-5A
522-3763-001	Audio Box	346B-3
522-3763-002	Audio Box	346B-3
522-3763-003	Audio Box	346B-3
522-3875-001	HSI	331A-6K
522-3985-001	Vertical Gyro	332D-11
522-4088-001	VHF Transceiver	618M-2B
522-4088-003	VHF Transceiver	618M-2B
522-4088-203	VHF Transceiver	618M-2B
522-4089-205	VHF Transc. 618M-2D	618M-2D
522-4114-003	Radar Indicator 339H-1	339H-1
522-4140-001	Antenna Radio Altimeter	437X-1
522-4160-002	Antenna Radio Altimeter	437X-1
522-4160-003	Antenna Radio Altimeter	437X-1
522-4160-004	Antenna Radio Altimeter	437X-1
522-4160-006	Antenna Radio Altimeter	437X-1
522-4160-007	Antenna Radio Altimeter	437X-1
522-4209-001	DME Transceiver	8,60E-01
522-4209-003	DME Transceiver	8,60E-01
522-4255-001	Antenna Radio Altimeter	437X-1A
522-4255-002	Antenna Radio Altimeter	437X-1A
522-4255-003	Antenna Radio Altimeter	437X-1A
522-4255-004	Antenna Radio Altimeter	437X-1A
522-4255-006	Antenna Radio Altimeter	437X-1A
522-4255-007	Antenna Radio Altimeter	437X-1A
522-4280-101	NAV Receiver	51RV-2B

### CAPABILITY LIST

Partnumber	Description	Type No
522-4538-002	PA Amp. 346D-1B	346D-1B
522-4538-003	PA Amp. 346D-1B	346D-1B
522-4892-014	Computer, Pitch Steering	562P-1E1
523155	Flap Indicator	1822
52D54	Gyro Directional Mitchell	
530-32760210	Indicator Airspeed 32760-210	32760-210
540-23989-011	Altitude Alerter	
540-25050-001	Altitude Alerter	540
5427	Magazine	
55-98-00175	Inductor 5250 Fairchild	
5690-1	Accelerometer	
5700-1	Hose 5' for AK950F5-28	
5812E	Oven Nordskog	
5934P3A-83	Altimeter	C661071-0101
597-2134-101	Nav Receiver Special Model	51RV-5DF
5X5MARKIIE	Headset	
5X5PRO1	Headset	
5X5PRO3	Headset	
01-01-01	Display Switching Unit	
6007-70A-44B	Fuel Flow Indicator	
60-0863-1	Power Supply Strobe Light	60-0863-1
601300-11	Linear Actuator	
60-2799-9	Power Supply, Strobe Light	60-2799-9
602TR	Hand mic	
60-3146-3	Power Supply, Strobe Light	60-3146-3
60-3368-7	Power Supply, Strobe Light	60-3368-7
6042H152	Relay	
607690-1	Emergency Beacon	Rescu-99
607690-2	Emergency Beacon	Rescu-99
607690-5	Emergency Beacon	Rescu-99
6088417-003	Mounting Tray	6088417-003
6097607-102	Transceiver, VHF Com	807A
6097607-104	Transceiver, VHF Com	807A
6097768-200	ATC Transponder	TP-114B
60B40025-43	Ballast 1343-1	
60B80031-10	Actuator Linear	
60B97213-3	Assy, slide block Tribon 10499	
610BL24B	Indicator TAT	
612664-2	Antenna	
617-5053-001	Cassette Storage Unit	617-5053-001
617-6265-001	Video Monitor, LCD	617-6265-001
617-6265-002	Video Monitor, LCD	617-6265-002
618M2D	VHF 522-4089-201	
620359	Flux Valve	
620783	Compensator	
6211-07	Amplifier Slaving	
622-0142-001	Remote HDG & CRS Selector	614E-22D
62204-001-029	Water Boiler, Remote	62204-001-029
622-0410-001	Radio Altimeter Transceiver	860F-2
622-0555-008	RMI 332C-10	332C-10
622-0757-001	Flight Director Indicator	FD-112C
622-0876-001	NAV Receiver	VIR-30A
622-0876-002	NAV Receiver	VIR-30A
622-0876-003	NAV Receiver	VIR-30A
622-0876-004	NAV Receiver	VIR-30A

### CAPABILITY LIST

Partnumber	Description	Type No
622-0876-011	NAV Receiver	VIR-30A
622-0876-012	NAV Receiver	VIR-30A
622-0876-013	NAV Receiver	VIR-30A
622-0876-014	NAV Receiver	VIR-30A
622-0876-201	NAV Receiver	VIR-30A
622-0876-202	NAV Receiver	VIR-30A
622-0876-203	NAV Receiver	VIR-30A
622-0876-204	NAV Receiver	VIR-30A
622-0876-211	NAV Receiver	VIR-30A
622-0876-212	NAV Receiver	VIR-30A
622-0876-213	NAV Receiver	VIR-30A
622-0876-214	NAV Receiver	VIR-30A
622-0877-001	NAV Receiver	VIR-30M
622-0877-002	NAV Receiver	VIR-30M
622-0877-003	NAV Receiver	VIR-30M
622-0877-004	NAV Receiver	VIR-30M
622-0877-201	NAV Receiver	VIR-30M
622-0877-202	NAV Receiver	VIR-30M
622-0877-203	NAV Receiver	VIR-30M
622-0877-204	NAV Receiver	VIR-30M
622-0944-003	Mode Selector	614E-20R
622-0945-003	Mode Selector	614E-23R
622-0954-001	Antenna Radio Altimeter	437X-1B
622-0954-002	Antenna Radio Altimeter	437X-1B
622-0964-001	Primary Servo	334C-9
622-0964-002	Primary Servo	334C-9
622-0965-001	Trim Servo, (Low Speed)	334D-6
622-0965-002	Trim Servo, (Low Speed)	334D-6
622-0966-001	Auto Pilot Computer	913K-1
622-1036-001	Autopilot Programmer	161H-1
622-1181-001	VHF Transceiver	618M-3
622-1181-006	VHF Transceiver	618M-3
622-1181-008	VHF Transceiver	618M-3
622-1204-001	Radar Indicator	339H-4
622-1204-002	Radar Indicator	339H-4
622-1204-003	Radar Indicator 339H-4	339H-4
622-1204-004	Radar Indicator	339H-4
622-1204-005	Radar Indicator	339H-4
622-1204-006	Radar Indicator	339H-4
622-1204-007	Radar Indicator	339H-4
622-1204-010	Radar Indicator	339H-4
622-1205-001	Radar Indicator	339H-4A
622-1205-002	Radar Indicator	339H-4A
622-1205-003	Radar Indicator	339H-4A
622-1205-004	Radar Indicator	339H-4A
622-1205-005	Radar Indicator	339H-4A
622-1210-001	Control, Pitch -Turn	6,14E-39
622-1233-001	DME Transceiver	DME-40
622-1234-013	DME Indicator	339F-12
622-1234-113	Indicator, DME	339F-12
622-1239-001	Nav Receiver	VIR-31A
622-1239-002	Nav Receiver	VIR-31A
622-1239-003	Nav Receiver	VIR-31A
622-1239-004	Nav Receiver	VIR-31A
622-1239-007	Nav Receiver	VIR-31A

### CAPABILITY LIST

Partnumber	Description	Type No
622-1239-008	Nav Receiver	VIR-31A
622-1239-009	Nav Receiver	VIR-31A
622-1239-011	Nav Receiver	VIR-31A
622-1239-012	Nav Receiver	VIR-31A
622-1239-013	Nav Receiver	VIR-31A
622-1239-014	Nav Receiver	VIR-31A
622-1239-027	Nav Receiver	VIR-31A
622-1239-201	Nav Receiver	VIR-31A
622-1239-202	Nav Receiver	VIR-31A
622-1239-203	Nav Receiver	VIR-31A
622-1239-204	Nav Receiver	VIR-31A
622-1239-207	Nav Receiver	VIR-31A
622-1239-208	Nav Receiver	VIR-31A
622-1239-209	Nav Receiver	VIR-31A
622-1239-211	Nav Receiver	VIR-31A
622-1239-212	Nav Receiver	VIR-31A
622-1239-213	Nav Receiver	VIR-31A
622-1239-214	Nav Receiver	VIR-31A
622-1239-227	Nav Receiver	VIR-31A
622-1270-001	ATC Transponder	TDR-90
622-1334-001	VHF Transceiver	VHF-20B
622-1352-001	F.D.Indicator FD-112V	FD-112V
622-1352-002	Flight Director Indicator	FD-112V
622-1396-001	VHF Comm Transceiver	618M-3A
622-1396-102	VHF COMM 618M-3A	618M-3A
622-1816-001	Trim Adaptor	699K-2
622-1879-001	VHF Transceiver	VHF-20A
622-1879-002	VHF Transceiver	VHF-20A
622-1879-011	VHF Transceiver	VHF-20A
622-2012-011	Indicator, DME	339F-12A
622-2012-013	Indicator, DME	339F-12A
622-2080-011	VHF Nav Receiver	VIR351
622-2092-001	Transponder	TDR-950
622-2093-001	Converter PWC-150	PWC-150
622-2175-201	DME Indicator	339F-12B
622-2224-001	ATC Transponder	621A-6A
622-2224-003	ATC Transponder	621A-6A
622-2362-001	ADF Receiver	ADF-60A
622-2363-001	Antenna ADF	ANT-60A
622-2363-002	Antenna ADF	ANT-60A
622-2363-011	Antenna ADF	ANT-60A
622-2366-001	Primary Servo	334C-9A
622-2366-002	Primary Servo	334C-9A
622-2462-011	Marker	AMR-350H
622-2500-004	Flight Computer	562A-5F5
622-2501-001	Weather Radar Antenna	ANT-312
622-2506-001	Radio Magnetic Indicator	RMI-36
622-2506-002	Radio Magnetic Indicator	RMI-36
622-2506-003	Radio Magnetic Indicator	RMI-36
622-2506-004	Radio Magnetic Indicator	RMI-36
622-2506-005	Radio Magnetic Indicator	RMI-36
622-2506-006	Radio Magnetic Indicator	RMI-36
622-2506-007	Radio Magnetic Indicator	RMI-36
622-2506-008	Radio Magnetic Indicator	RMI-36
622-2506-009	Radio Magnetic Indicator	RMI-36

### CAPABILITY LIST

Partnumber	Description	Type No
622-2506-010	Radio Magnetic Indicator	RMI-36
622-2506-011	Radio Magnetic Indicator	RMI-36
622-2506-012	Radio Magnetic Indicator	RMI-36
622-2506-013	Radio Magnetic Indicator	RMI-36
622-2506-014	Radio Magnetic Indicator	RMI-36
622-2506-015	Radio Magnetic Indicator	RMI-36
622-2506-101	Radio Magnetic Indicator	RMI-36
622-2506-102	Radio Magnetic Indicator	RMI-36
622-2506-103	Radio Magnetic Indicator	RMI-36
622-2506-104	Radio Magnetic Indicator	RMI-36
622-2506-105	Radio Magnetic Indicator	RMI-36
622-2506-106	Radio Magnetic Indicator	RMI-36
622-2506-107	Radio Magnetic Indicator	RMI-36
622-2506-108	Radio Magnetic Indicator	RMI-36
622-2506-109	Radio Magnetic Indicator	RMI-36
622-2506-110	Radio Magnetic Indicator	RMI-36
622-2506-111	Radio Magnetic Indicator	RMI-36
622-2612-012	Autopilot Amplifier	562C-5F
622-2614-012	Autopilot Ampl. 562C-5F	562C-5F
622-2733-001	Primary Servo	334C-11
622-2819-001	Nav Receiver	VIR-31H
622-2819-002	Nav Receiver	VIR-31H
622-2819-003	Nav Receiver	VIR-31H
622-2819-004	Nav Receiver	VIR-31H
622-2819-201	Nav Receiver	VIR-31H
622-2819-203	Nav Receiver	VIR-31H
622-2819-204	Nav Receiver	VIR-31H
622-2855-001	Radio Altimeter Transceiver	ALT-55B
622-2855-002	Radio Altimeter Transceiver	ALT-55B
622-2855-011	Radio Altimeter Transceiver	ALT-55B
622-2855-012	Radio Altimeter Transceiver	ALT-55B
622-2873-001	ADF Receiver	ADF-60B
622-2883-001	HF Power Amplifier	PWR-200
622-2884-001	HF Antenna Coupler	AAC-200
622-2885-001	HF Control Panel	CTL-200
622-2920-003	DME Transceiver	8,60E-02
622-2921-001	DME Transceiver	8,60E-03
622-2921-002	DME Transceiver	8,60E-03
622-2921-004	DME Transceiver	8,60E-03
622-2921-005	DME Transceiver	8,60E-03
622-2921-006	DME Transceiver	8,60E-03
622-2937-002	Indicator, Radio Altimeter	ALI-55
622-2937-003	Indicator, Radio Altimeter	ALI-55
622-2937-004	Indicator, Radio Altimeter	ALI-55
622-2937-005	Indicator, Radio Altimeter	ALI-55
622-2937-008	Indicator, Radio Altimeter	ALI-55
622-2937-009	Indicator, Radio Altimeter	ALI-55
622-2938-001	Indicator, Radio Altimeter	ALI-55A
622-2938-002	Indicator, Radio Altimeter	ALI-55A
622-2938-003	Indicator, Radio Altimeter	ALI-55A
622-2938-004	Indicator, Radio Altimeter	ALI-55A
622-3101-011	Audio Panel	AUD251H
622-3186-006	Flight Mode Annunciator	914G-9
622-3201-001	Radio Altimeter Transceiver	ALT-50A
622-3201-002	Radio Altimeter Transceiver	ALT-50A

### CAPABILITY LIST

Partnumber	Description	Type No
622-3201-011	Radio Altimeter Transceiver	ALT-50A
622-3201-012	Radio Altimeter Transceiver	ALT-50A
622-3202-001	Auto Pilot Computer	913K-1A
622-3246-001	Control, Pitch -Turn	614E-41A
622-3255-002	VHF NAV Receiver	51RV-5
622-3255-009	Nav Receiver	51RV-4B
622-3257-001	Nav Receiver	51RV-4B
622-3257-003	Nav Receiver	51RV-4B
622-3257-006	Nav Receiver	51RV-4B
622-3257-101	Nav Receiver	51RV-4B
622-3260-001	Trim Servo	334D-6A
622-3594-016	Flight Dir Ind ADI-84A	ADI-84A
622-3670-001	DME TX/RX TCR-451	TCR-451
622-3671-001	DME Indicator IND-450	IND-450
622-3698-001	Antenna Radio Altimeter	ANT-50A
622-3702-001	Bearing Distance Indicator	BDI-36
622-3702-002	Bearing Distance Indicator	BDI-36
622-3702-003	Bearing Distance Indicator	BDI-36
622-3702-004	Bearing Distance Indicator	BDI-36
622-3702-005	Bearing Distance Indicator	BDI-36
622-3702-006	Bearing Distance Indicator	BDI-36
622-3702-007	Bearing Distance Indicator	BDI-36
622-3702-008	Bearing Distance Indicator	BDI-36
622-3702-009	Bearing Distance Indicator	BDI-36
622-3702-010	Bearing Distance Indicator	BDI-36
622-3702-011	Bearing Distance Indicator	BDI-36
622-3702-012	Bearing Distance Indicator	BDI-36
622-3702-013	Bearing Distance Indicator	BDI-36
622-3702-014	Bearing Distance Indicator	BDI-36
622-3702-015	Bearing Distance Indicator	BDI-36
622-3702-016	Bearing Distance Indicator	BDI-36
622-3916-001	DME Indicator	IND-40A
622-3919-001	DME Indicator	IND-41A
622-4021-001	Radar T/R WXR-200A	WXR-200A
622-4022-001	Radar Transceiver	WXT-250A
622-4027-003	Radar Indicator	IN-250A
622-4096-001	PA Amplifier	346D-2B
622-4096-002	PA Amp. 346D-2B	346D-2B
622-4160-001	Indicator R.A.	DRI-55
622-4160-002	Indicator R.A.	DRI-55
622-4160-003	Indicator R.A.	DRI-55
622-4160-004	Indicator R.A.	DRI-55
622-4160-005	Indicator R.A.	DRI-55
622-4160-006	Indicator R.A.	DRI-55
622-4160-007	Indicator R.A.	DRI-55
622-4160-008	Indicator R.A.	DRI-55
622-4160-011	Indicator R.A.	DRI-55
622-4160-012	Indicator R.A.	DRI-55
622-4160-013	Indicator R.A.	DRI-55
622-4160-014	Indicator R.A.	DRI-55
622-4160-015	Indicator R.A.	DRI-55
622-4160-016	Indicator R.A.	DRI-55
622-4160-017	Indicator R.A.	DRI-55
622-4160-018	Indicator R.A.	DRI-55
622-4424-001	Vertical Gyro	

### CAPABILITY LIST

Partnumber	Description	Type No
622-4523-215	VHF Comm Selector	CTL-20
622-4526-015	ADF Control	CTL-60
622-4545-003	HF Control Panel	CTL-220
622-4550-001	Antenna Radio Altimeter	ANT-51A
622-4561-001	Breakout Box	CTS-10
622-4808-002	ADI ADI-85A	ADI-85A
622-4913-001	HSI	HSI-70
622-4957-001	Control, Radio Set, UHF	C-10828(V)/ARC-190(V)
622-5026-001	Trim Servo	334D-6B
622-5028-001	Mounting, Servo	SMT-85A
622-5048-361	Panel Control EFIS	
622-5082-001	Trim Servo	334D-6C
622-5135-001	Antenna	WMA701X
622-5135-202	Antenna Radar	WMA-701X
622-5137-001	Antenna Radar	WFA-701X
622-5211-001	Tray	UMT-11
622-5219-004	VHF Comm Transceiver-	VHF-700
622-5219-004RENTA	VHF Comm Transceiver-	VHF-700
622-5272-001	HF Transceiver	HF-700
622-5272-020	HF Transceiver HFS-700	HFS-700
622-5272-120	HF Transceiver	HF-700
622-5337-001	HF Transceiver	TCR-220
622-5342-101	Pass. Address Unit	PAU-700
622-5367-001	Indicator, Radio Altimeter	ALI-55B
622-5377-001	HF Transceiver	628T-2A
622-5734-002	Servo Primary	SVO-65
622-5798-008	Flight Control Panel	FCP-65
622-5812-001	Detector Flux Valve	FDU-70
622-5812-004	Detector Flux Valve	FDU-70
622-5940-001	Radar Indicator	IND-220
622-5940-008	Radar Indicator	IND-220
622-5941-001	Radar Indicator	IND-270
622-5941-002	Radar Indicator	IND-270
622-5962-001	Rec.Transm. 628T-3A	628T-3A
622-6087-106	EAP Computer	EAP-701A
622-6089-102	EICAS Panel	DSP-701A
622-6137-001	VHF Nav Receiver	VIR-32
622-6137-201	NAV Receiver (FM Imm)	VIR-32
622-6152-001	VHF Transceiver	VHF-22A
622-6152-002	VHF Transceiver	VHF-22A
622-6152-011	VHF Transceiver	VHF-22A
622-6152-012	VHF Transceiver	VHF-22A
622-6152-021	VHF Transceiver	VHF-22A
622-6152-022	VHF Transceiver	VHF-22A
622-6152-023	VHF Transceiver	VHF-22A
622-6152-031	VHF Transceiver	VHF-22A
622-6152-032	VHF Transceiver	VHF-22A
622-6152-033	VHF Transceiver	VHF-22A
622-6153-001	VHF Transceiver	VHF-22B
622-6153-002	VHF Transceiver	VHF-22B
622-6153-021	VHF Transceiver	VHF-22B
622-6153-022	VHF Transceiver	VHF-22B
622-6153-023	VHF Transceiver	VHF-22B
622-6200-002	HSI CTL HCP-74	HCP-74
622-6263-001	DME Transceiver	DME-42

### CAPABILITY LIST

Partnumber	Description	Type No
622-6263-003	DME Transceiver	DME-42
622-6389-001	VHF Transceiver	VHF-21A
622-6389-002	VHF Transceiver	VHF-21A
622-6389-011	VHF Transceiver	VHF-21A
622-6389-012	VHF Transceiver	VHF-21A
622-6390-001	VHF Transceiver	VHF-21B
622-6390-002	VHF Transceiver	VHF-21B
622-6392-002	Comparator Warn Computer	CWC-80
622-6471-002	HF Coupler AAC-220P	AAC-220P
622-6473-001	Long Wire Adapter	LWA-200
622-6513-001	Weather Radar Antenna	ANT-312A
622-6520-001	VHF Control Panel	CTL-22
622-6520-003	VHF Control Panel	CTL-22
622-6520-008	VHF Control Panel	CTL-22
622-6521-002	VHF NAV Control Panel	CTL-32
622-6521-011	VHF NAV Control Panel	CTL-32
622-6521-016	VHF NAV Control Panel	CTL-32
622-6522-002	ADF Control Panel	CTL-62
622-6522-008	ADF Control Panel	CTL-62
622-6522-016	ADF Control Panel	CTL-62
622-6523-002	ATC Control Panel	CTL-92
622-6523-008	ATC Control Panel	CTL-92
622-6523-201	ATC Control Panel	CTL-92
622-6523-203	ATC Control Panel	CTL-92
622-6523-204	ATC Control Panel	CTL-92
622-6523-205	ATC Control Panel	CTL-92
622-6523-206	ATC Control Panel	CTL-92
622-6523-207	ATC Control Panel	CTL-92
622-6523-208	ATC Control Panel	CTL-92
622-6523-213	ATC Control Panel	CTL-92
622-6524-001	DME Indicator	IND-42A
622-6524-002	DME Indicator	IND-42A
622-6524-003	DME Indicator	IND-42A
622-6524-004	DME Indicator	IND-42A
622-6557-001	TX RX HF TCR-230	TCR-230
622-6557-013	TX RX HF TCR-230	TCR-230
622-6590-001	Transponder / ADF Adapter	CAD-62
622-6590-002	Transponder / ADF Adapter	CAD-62
622-6614-001	HF Control CTL-230	CTL-230
622-6614-021	HF Control CTL-230	CTL-230
622-6614-023	HF Control CTL-230	CTL-230
622-6667-001	HF Power Amp PWR-230	PWR-230
622-6793-001	Antenna Radio Altimeter	ANT-52
622-6827-021	HF Control Panel	HFP-712
622-6827-022	HF Control Panel	HFP-712
622-6831-021	VHF Comm Control Panel	VFP-712
622-7194-001	Nav Receiver	VIR-432
622-7194-011	Nav Receiver	VIR-432
622-7194-101	Nav Receiver	VIR-432
622-7194-201	Nav Receiver	VIR-432
622-7292-001	VHF Transceiver	VHF-422A
622-7292-002	VHF Transceiver	VHF-422A
622-7292-101	VHF Transceiver	VHF-422A
622-7292-102	VHF Transceiver	VHF-422A
622-7292-121	VHF Transceiver	VHF-422A

### CAPABILITY LIST

Partnumber	Description	Type No
622-7292-122	VHF Transceiver	VHF-422A
622-7292-123	VHF Transceiver	VHF-422A
622-7293-001	VHF Transceiver	VHF-422B
622-7293-002	VHF Transceiver	VHF-422B
622-7293-101	VHF Transceiver	VHF-422B
622-7293-102	VHF Transceiver	VHF-422B
622-7293-121	VHF Transceiver	VHF-422B
622-7293-122	VHF Transceiver	VHF-422B
622-7293-123	VHF Transceiver	VHF-422B
622-7309-001	DME Transceiver	DME-442
622-7309-101	DME Transceiver	DME-442
622-7318-001	DME Indicator	IND-42C
622-7318-002	DME Indicator	IND-42C
622-7318-003	DME Indicator	IND-42C
622-7318-004	DME Indicator	IND-42C
622-7337-001	Radar Transceiver	WXT-250B
622-7382-001	ADF Receiver	ADF-462
622-7382-101	ADF Receiver	ADF-462
622-7382-111	ADF Receiver	ADF-462
622-7383-001	ADF Receiver	ANT-462A
622-7384-001	ADF Receiver	ANT-462B
622-7925-303	Servo, Primary	SVO-1000
622-8594-022	Panel Dual ATC	DTP-722
622-8594-121	Panel Dual ATC	DTP-722
622-8613-001	Bearing Adapter	BIA-32
622-8613-002	Bearing Adapter	BIA-32
622-8701-002	Antenna, Radio Altimeter	RAA-700
622-8737-001	VHF Comm Control Panel	CTL-22A
622-8738-001	VHF NAV Control Panel	CTL-32A
622-8739-001	ADF Control Panel	CTL-62A
622-8739-002	ADF Control Panel	CTL-62A
622-8739-008	ADF Control Panel	CTL-62A
622-8739-016	ADF Control Panel	CTL-62A
622-8740-002	ATC Control Panel	CTL-92A
622-8740-008	ATC Control Panel	CTL-92A
622-8740-201	ATC Control Panel	CTL-92A
622-8740-203	ATC Control Panel	CTL-92A
622-8740-204	ATC Control Panel	CTL-92A
622-8740-205	ATC Control Panel	CTL-92A
622-8740-206	ATC Control Panel	CTL-92A
622-8740-207	ATC Control Panel	CTL-92A
622-8740-208	ATC Control Panel	CTL-92A
622-8740-213	ATC Control Panel	CTL-92A
622-9213-001	Trim Adaptor	699K-3
622-9851-001	VHF Control Panel	CTL-23
622-9976-001	DME Indicator	IND-42M
622-9976-002	DME Indicator	IND-42M
622-9976-003	DME Indicator	IND-42M
622-9976-004	DME Indicator	IND-42M
6247813-001	Antenna ATC	6247813-001
625HS	Handset	625HS
62800-001	Microphone Hand	100TRA
63274-008	Handset HS-500	HS-500
63333-000	Microphone	500T
63574-000	Receiver	

### CAPABILITY LIST

Partnumber	Description	Type No
6373-006-001AA	Magnetic Indicator	
63983	Mic w/Plug and Wire	
63999-000	Mike Telex T-38	T-38
64/45350	Inverter ** se pn: 64-45350	F.I. 35
64000-100	Headset 5X5	
64141-862-1	INDICATOR CABIN ALTITUDE	
64300-000	Headset	AirMan-750
64300-005	Headset	AirMan-750
64300-008	Headset	AirMan-750
64300-010	Headset	AirMan-750
64300-012	Headset	AirMan-750
64300-016	Headset	AirMan-750
64300-019	Headset	AirMan-750
64300-020	Headset	AirMan-750
64300-021	Headset	AirMan-750
64300-022	Headset	AirMan-750
64300-100	Headset Airman750	AirMan-750
64300-105	Headset	AirMan-750
64300-108	Headset	AirMan-750
64300-110	Headset	AirMan-750
64300-112	Headset	AirMan-750
64300-116	Headset	AirMan-750
64300-118	Headset	AirMan-750
64300-119	Headset	AirMan-750
64300-120	Headset	AirMan-750
64300-121	Headset	AirMan-750
64300-122	Headset	AirMan-750
64300-200	Headset Airman-750	Airman-750
64-45350	Inverter Ferranti F.I.35	FI-35
64-50730	Horizon Ferranti	
65-0294-23	Caution Light, Master	65-0294-23
65-20679-10	Inboard Flap Transmission	
65-24917-194	Autopilot Accessory Unit	
65-52803-8	Temp. Ctrl. Window	
65WE00224-1	Pump Hyd.	
66000000-1	Dual Digital DME Ind.	
66000016	Digital Clifton Precision	
66T	Microphone	60837-001
66TRA	Microphone	60837-008
69-37315-300	Panel Boeing	
7000469-901	Horizontal Situation Indicator	RD-650A
7000469-903	Horizontal Situation Indicator	RD-650B
7000469-905	Horizontal Situation Indicator	RD-650
7000469-907	Horizontal Situation Indicator	RD-650R
7000469-909	Horizontal Situation Indicator	RD-650
7000469-913	Horizontal Situation Indicator	RD-650
7000622-901	Gyro, Vertical	VG-14A
7000839-902	Altimeter, Radio	RA-315
7000839-904	Altimeter, Radio (Helicopter vers)	RA-335
7000C-31	Vertical Speed Indicator	
700-1516-002	SVDU Terminator Plug	700-1516-002
7001840-902	Radio Altimeter Transceiver	RT-300
7001840-911	Radio Altimeter Transceiver	RT-300
7001840-912	Radio Altimeter Transceiver	RT-300
7001840-913	Radio Altimeter Transceiver	RT-300

### CAPABILITY LIST

Partnumber	Description	Type No
7001840-922	Radio Altimeter Transceiver	RT-300
700-2061-001	Video Monitor, LCD	700-2061-001
700-2200-001	Smart Video Distribution Unit	700-2200-001
700-2204-001	Digital Passanger Control Unit	700-2204-001
700-2204-002	Digital Passanger Control Unit	700-2204-002
700-2214-001	Termination Plug	700-2214-001
700-2218-001	Seat Electronics Box	700-2218-001
7002860-909	Indicator, Mach Airspeed	SI-285
7003360-944	Ref. Unit	AH-600
7003400-802	Generator Symbol	
7003974-605	Flight Guidance Computer	FZ-600
7003975-602	Flight Guide GC-600	GC-600
7004544-713	Symbol Generator	SG-811
7006	Headset, No longer available	MT24H79F-01
7006921-302	Radar Controller	WC-800
7010133	Flux Valve FX-600	FX-600
7010523-901	Radar Antenna	AP-900B
7010534-901	Antenna Adapter Unit	Primus-90B
7010546-901	Radar Indicator	DI-900B
7010577-901	Patch Cord	Primus-90B
7010610-901	Controller, Master	Primus-90B
7010612-901	Radar Transceiver	RT-900B
7012077-901	Waveguide Switching Unit	Primus-90(B)
70509-0001	Amplifier f/10-61825-2	
705-15V4	Horizon	
706087M	Ear Seal Oil Filled, C40	
706-915-2	Fuel Qty Amplifier	
71060-201	Headset	
71060-503HM	Headset ANR-4100	ANR-4100
713-6B	Valve	
715-174-373	Contr. Head ATC2000	0715.174-286
72-111211-000	Smoke Detector Fenwal	
72417	Timer / Nordskog	
72417-501	Temp.Control Nordskog	
7264-4654	Relay	MS-24171D1
737852A	Integrated Drive Generator	
737854D	Generator Control Unit	
743-0288-001	Audio Multiplexer	743-0288-001
743-0293-001	Video Reproducer Unit	743-0293-001
743-0315-002	Programable System Control Unit	743-0315-002
7-43140-2	Cable assy	
747	ATC Control Panel	747
750656-3	Sensor	
7514081-901	Antenna TCAS	AT-910
751-7800-10004	Transponder"S"mode / DC vers.	
7522-1	VHF Comm Control Panel	7522-1
01-01-22	VHF Comm Control Panel	01-01-22
10-01-22	VHF Comm Control Panel	10-01-22
11-01-22	VHF Comm Control Panel	11-01-22
02-01-22	VHF Comm Control Panel	02-01-22
03-01-22	VHF Comm Control Panel	03-01-22
04-01-22	VHF Comm Control Panel	04-01-22
05-01-22	VHF Comm Control Panel	05-01-22
06-01-22	VHF Comm Control Panel	06-01-22
07-01-22	VHF Comm Control Panel	07-01-22

### CAPABILITY LIST

Partnumber	Description	Type No
08-01-22	VHF Comm Control Panel	08-01-22
09-01-22	VHF Comm Control Panel	09-01-22
761-0635-002	Mount 790Y-2	790Y-2
768-5715-001	Adaptor	768-5715-001
7709-72-B8-1	Fuel Pressure Transmitter	
772-5132-001	Mode Coupler	1,61E+00
772-5140-002	Gyro	RG3-11
772-5370-001	HSI	331A-8G
772-5370-002	HSI	331A-8G
772-5370-003	HSI	331A-8G
772-5370-005	HSI	331A-8G
773288-8	Valve S210T120-63	
7740	Smoke Detector	Model-601
7740-01	Smoke Detector	Model-601
7750	Smoke Detector	Model-601
7750-01	Smoke Detector	Model-601
7750-02	Smoke Detector	Model-601
7750-03	Smoke Detector	Model-601
777-1061-001	Servo, Primary	334C-6
777-1397-010	HSI 331A-8K	331A-8K
777-1492-001	ADF Receiver	
777-1492-004	Receiver, ADF	51Y-7
777-1492-005	Receiver, ADF	51Y-7
778-3893-001	Antenna Coupler Sub. Assy	
77B2	Indicator Dual Temp.	
78-10066B-BP	De Icer Timer	
78-10066BP-C	De Icer Timer	
786A-2	VHF Control Panel	
787-6211-001	ATC Transponder	621A-6
787-6211-002	ATC Transponder	621A-6
787A-2	NAV Control Panel	
787A-2M4	NAV Control Panel	
792-6140-001	HF Coupler	490S-1
792-6216-001	ADF Receiver 51Y-7A	51Y-7A
792-6216-002	ADF Receiver 51Y-7A	51Y-7A
792-6216-004	ADF Receiver	
792-6355-001	Flight Director Indicator	329B-7R
792-6694-000	Vertical Gyro	332D-11A
792-6694-001	Vertical Gyro	332D-11A
792-6694-002	Vertical Gyro	332D-11A
799	Datum Pnl	
7S609767	Control Box OCM-700	OCM-700
7S610318	Oven OCM-700	OCM-700
7S611515	Control Unit	OCM-1000
7S611993	Control Unit	OCM-1000
7S611994	Control Unit	OCM-1000
80-01-06843	Receiver Assy	
80-0324-11	Panel, Warning	80-0324-11
80-0324-17	Panel	80-0324-17
80-0591-5	Central Warning Panel	80-0591-5
8006	Headset	MT51H79F-01 VI
8-010-000	Inclinometer	
80-1055	ELT Dual Frq MCM330	80-1055
80265-00-0311	GPS Reciever	TNL-3100
80265-01-0234	GPS Reciever	TNL-2100

### CAPABILITY LIST

Partnumber	Description	Type No
8040000599	HF Transceiver RT-510	RT-510
80415-00-0601	GPS Reciever	TNL-1000
80415-10-0612	GPS Reciever	TNL-1000DC
80742-00-002H	GPS Reciever	TNL-8100
80742-00-0060	GPS Reciever	TNL-8100
807A	Transceiver, VHF Com	
80821-00-0235	GPS Reciever	TNL-2000T
80822-00-0235	GPS Reciever	TNL-2100T
80822-10-0236	GPS Reciever	TNL-2100T I/O
80822-11-0236	GPS Reciever	TNL-2100T I/O
80822-12-0236	GPS Reciever	TNL-2100T I/O
80823-00-0335	GPS Reciever	TNL-3000T
80824-00-0318	GPS Reciever	TNL-3100T
8095260-4104	Control Panel, Nav	CD-412B
8095261-4210	ATC Control Panel	CD-422B
8095263-4405	DME Selector Display	SD-442
8095318-6001	Mode Selector	MC-603B
8095318-6005	Mode Selector	MC-603B
8095318-6006	Mode Selector	MC-603B
8095319-6001	Autopilot Controller	FC-602C
8095319-6005	Autopilot Controller	FC-602C
8095444-4101	NAV Control Panel	CD-413B
81154-30	Data Loader	
81194	Antenna High Speed	
811B24	Chronometer	811B
81438-00-0232	GPS Receiver	TNL-2000 Approach
81438-02-0240	GPS Receiver	TNL-2000 Approach Plus
81438-02-240A	GPS Receiver	TNL-2000 Approach Plus
81438-02-240B	GPS Receiver	TNL-2000 Approach Plus
81439-00-0242	GPS Receiver	TNL-2101 Approach
81439-02-0240	GPS Receiver	TNL-2101 Approach Plus
81439-02-240A	GPS Receiver	TNL-2101 Approach Plus
81439-02-240D	GPS Receiver	TNL-2101 Plus
81439-02-240E	GPS Receiver	TNL-2101Plus 240E
81439-03-240D	GPS Receiver	TNL-2101 Approach Plus
81440-00-0238	GPS Nav Rec. TNL2101 I/O	TNL-2101 I/O
81440-00-0243	GPS Receiver	TNL-2101 I/O Approach
81440-02-0241	GPS Receiver	TNL-2101 I/O Approach Plus
81440-02-241A	GPS Receiver	TNL-2101 I/O Approach Plus
81440-02-241B	GPS Receiver	TNL-2101 I/O Approach Plus
81440-02-241D	GPS Receiver	TNL-2101 I/O Approach Plus
822-0330-001	Transceiver HF	HFS-900
822-0393-001	Nav Receiver	VIR-433
822-0400-001	Nav Receiver	VIR-33
822-0416-001	Radar Indicator	IND-270A
822-0416-002	Radar Indicator	IND-270A
822-0693-004	VHF Comm Tranceiver-	VHF-700A
822-0730-112	Radio Tuning Unit	RTU-4220
822-0731-001	VHF Com TR 618M-4	618M-4
822-0760-002	VHF NAV Receiver	51RV-5
822-0761-001	VHF NAV Receiver	51RV-5B
822-0761-003	Nav Receiver	51RV-5B
822-1044-004	VHF Comm Tranceiver-	VHF-700B
822-1045-001	VHF Comm Receiver	618M-5
822-1045-401	VHF Transceiver	618M5

### CAPABILITY LIST

Partnumber	Description	Type No
822-1047-003	VHF Transceiver	VHF-900B
822-1111-001	VHF Comm Transceiver	VHF-21C
822-1112-001	VHF Comm Transceiver	VHF-21D
822-1113-001	VHF Comm Transceiver	VHF-22C
822-1113-021	VHF Comm Transceiver	VHF-22C
822-1114-001	VHF Comm Transceiver	VHF-22D
822-1114-021	VHF Comm Transceiver	VHF-22D
822-1115-001	VHF Transceiver	VHF-422C
822-1115-021	VHF Transceiver	VHF-422C
822-1116-001	VHF Transceiver	VHF-422D
822-1116-021	VHF Transceiver	VHF-422D
822-1120-001	VHF Comm Control Panel	CTL-22C
822-1120-002	VHF Comm Control Panel	CTL-22C
822-1120-003	VHF Comm Control Panel	CTL-22C
822-1120-005	VHF Comm Control Panel	CTL-22C
822-1120-008	VHF Comm. Control 8.33 khz	CTL-22C
822-1121-002	VHF Control Panel	CTL-23C
822-1293-002	TCAS II, Enhanced Transmitter	TTR-921
822-1363-002	Config. Strapping Unit	CSU-3100
822-1626-105	Integrated Datalink Controller	IDC-900
822-1807-001	Control Panel, Transponder	CTL-92E
822-1807-002	Control Panel, Transponder	CTL-92E
822-1807-003	Control Panel, Transponder	CTL-92E
822-1807-004	Control Panel, Transponder	CTL-92E
822-1807-005	Control Panel, Transponder	CTL-92E
822-1807-006	Control Panel, Transponder	CTL-92E
823CFU-2	Mode Selector	
823CUF2	Mode Selector	
82877	2000 App+ Pilots Guide	
83000-05603	Heat Control Window	
83131-00	2000 Approach Plus System w/Int' l Database	81438-02-240B/D
86000-1107	Clock	
860F1	Transceiver 522-3698-003	
87000-1121	Clock	
8800T	Altitude Sensor	8800-T
88031030	Outlet NEMA 5-15 flanged, 15A	5279
881-902-926	se TG460-05	
884-456-918	**)se under 0884.456-918	FB460-2
889-415-918	Distributor VT460-2	VT460-2
889-423-918	**) se pn 0889.423-918	VT460-4
8900	AMS2000 Alt.Alert.Syst	AMS-2000
89-01-07122	Handset Assy	89-01-07122
89-01-08524-16	Handset Assy	89-01-08524-16
89-01-09369-16	Handset Assy	89-01-09369-16
89-01-09370-16	Handset Assy	89-01-09370-16
89-01-09372-16	Handset Assy	89-01-09372-16
89-01-09600	Handset	89-01-09600
89-01-09600-16	Handset Assy	89-01-09600-16
89-01-09601-16	Handset Assy	89-01-09601-16
89-01-09667-16	Handset Assy	89-01-09667-16
89-01-09868-16	Handset Assy	89-01-09868-16
893954	Steering Unit	
896767	Fire Wire Element	
898732-02	Card Fire Det. Control W. Kidde	
8TJ124GGT1	Transmitter Fuel Flow	

### CAPABILITY LIST

Partnumber	Description	Type No
8TJ146AAA1	Transmitter Oil Qty	
8TJ50GCA3	Transmitter Fuel Flow	
8TJ80GAA1	Power Supply	
900001-1	Trim Connect	TNL-3100D
900001-2	Trim Connect	TNL-3100D
903-1341	Hand Mic	
90-5145-9-2	Indicator TRA-45A	TRA-45A
90G237	Switch Pressure	
90G97	Switch Pressure	
914F998-2	Stator	
914G9	Annunciator Mode Controller	914G-9
915F212-4	Generator Control	
9-328-19	Indicator Fuel Flow Kg	9-328-19
9-328-20	Indicator Fuel Flow Lb.	9-328-20
934500-03	DME Converter, ARINC 429/RS232	934500-03
93A055-00	Microphone Module	A55
93A055-03	Microphone Module	A55-3
93A055-10	Microphone Module	A55B
93A055-20	Microphone Module	A55B
93A055-30	Microphone Module	A55B
93A055-40	Microphone Module	A55B
93A055-50	Microphone Module	A55B
93A055-55	Microphone Module	A55B
93A055-60	Microphone Module	A55B
93A055-65	Microphone Module	A55B
93A055-66	Microphone Module	A55B
93A055-67	Microphone Module	A55B
93A055-95	Microphone Module	A55B
93-A100	Voice Recorder	93-A100
93A100-10	Cockpit Voice Recorder	A100
93A100-11	Cockpit Voice Recorder	A100
93-A100-30	Voice Recorder	** se memo
93A100-30	Voice Recorder	A100
93A100-31	Cockpit Voice Recorder	A100
93A100-32	Cockpit Voice Recorder	A100
93A100-33	Cockpit Voice Recorder	A100
93A100-80	Cockpit Voice Recorder	A100A
93A100-81	Cockpit Voice Recorder	A100A
93A100-82	Cockpit Voice Recorder	A100A
93-A100-83	Voice Recorder	93-A100-83
93A100-83	Cockpit Voice Recorder	A100A
93A100-84	Cockpit Voice Recorder	A100A
93A100-85	Cockpit Voice Recorder	A100A
93A150-20	External Amplifier	A150
93A151-00	Control Panel, CVR	A151
93A151-01	Control Panel, CVR	A1511
93A151-20	Control Panel, CVR	A151B
93A151-30	Control Panel, CVR	A151B
93A151-40	Control Panel, CVR	A151B
93A151-50	Control Panel, CVR	A151B
93A152-00	Control Panel, CVR	A152
93A152-01	Control Panel, CVR	A1521
93A152-04	Control Panel, CVR	A1524
93A152-20	Control Panel, CVR	A152B
93A152-25	Control Panel, CVR	A152B

### CAPABILITY LIST

Partnumber	Description	Type No
93A152-30	Control Panel, CVR	A152B
93A152-35	Control Panel, CVR	A152B
93A152-40	Control Panel, CVR	A152B
93A152-50	Control Panel, CVR	A152B
93A152-60	Control Panel, CVR	A152B
93A152-70	Control Panel, CVR	A152B
949594-8	Controller Torque	
9599-607	Radio Altimeter	
96126096	EFIS Control Panel	
962810	Fuel/Airdata Computer	ADC-200
962820	Fuel/Airdata Computer	ADC-200
962820-1	Fuel Airdata Computer ADC200	
962830-1	Fuel/Airdata Computer	ADC-2000
962830-2	Fuel/Airdata Computer	ADC-2000
962830-3	Fuel/Airdata Computer	ADC-2000
964-0400-024	Flight Management Portable Loader	
964-0452-011	HF Com	
964-0453-011	HF Coupler	FK-516
965-0389-004	Baro Rate Computer	965-0389-004
965-0686-001	GPWS Ground Prox	GPWS-MK VI
965-1176- ?? DC ver:	EGPWS Computer DC Version	
965-1676-001	Ground Prox. Warn. Computer	EGPWS
96774-18-1675	Indicator Flow	
97607-104	Transceiver, VHF Com	807A
98-01-08525-17	Support Bracket	98-01-08525-17
98-01-09373-17	Support Bracket	98-01-09373-17
98-01-09374-17	Support Bracket	98-01-09374-17
98-01-09377-17	Support Bracket	98-01-09377-17
98-01-09599-17	Support Bracket	98-01-09599-17
98-01-09602	Hanger f. Handset	98-01-09602
98-01-09602-17	Support Bracket	98-01-09602-17
980-4700-003	Flight Data Recorder Digital	SSFDR
980-4700-033	Flight Data Recorder	SSFDR
980-6005-076	CVR AV-557C	AV-557C
980-6020-001	Cockpit Voice Recorder	SSCVR
980-9900-001	Audio Reproducer	980-9900-001
980N1	Altimeter 522-4610-001 testset	980N1
981-3088-010	Accelerometer	101011-BCS
9813-25-07	Indicator, Dual Torque	9813-25-07
9864050-6	Flap Position Indicator	
990-3333-185	Audio Panel	B1045-J521-RBH3
990-3344-002	Audio Amplifier	M2061B
9912049-3	Indicator Oil Pressure	472021
9912049-4	ITTemp Ind. Simmonds: 472017	
9986-24	Inverter 24v - 230Vac 600w	DanPower Elect.
A100	Cockpit Voice Recorder	93-A100
A100-30	Cockpit Voice Recorder	93-A100-30
A152-4	Control, CVR	A152-4
A20942B	Flag Ind. Right	
A22001-16	Box Test	
A301-4	ARC Intercom C6533	
A3-06-1692-1	E.L.T.	
A31-1199-01	Transf. Intermediat.	
A3249	Antenna Rods	
A3948	Flapper	

### CAPABILITY LIST

Partnumber	Description	Type No
A700ZG	Relay	
A848KH	Relay	
A9259190200200	Cabin Light Controlbox	
A-9520-1-24	Instrument Light Assy	
A-957E	Relay	
ACM 29950	Valve Pressure Reducing	
ACM22426	Valve Pressure Reducing	
ACREM1/A	Megaphone	
AD1	Antenna f/ATR720B	
ADC-200	Air Data Computer	ADC-200
AG34	Tacho Generator	MIL-G-26611
AH2542D	Handset	Team
AH3	HF Tuner	AH3
AH-4	HF Antenna Tuner	AH-4
AIM510-8B	Gyro Horizon 504-0017-916	AIM510-8B
Aircom 800 Ex	Handheld Transceiver Explosiveproof	
AIRMAN750	Headset	64300-100
AIRMAN760	Headset	
AK950F5-28	Fan Cooling	
AMBA-4	Antenna	
ANR-1D	Headset	
ANS-70SL	Turn & Bank Indicator	
ANT60A	Antenna se pn: 622-2363-001	ANT-60A
ANTENNA	Twin Scann.Ant. w/charger	
APE927	Time Base Unit Air Precision	
APE955-205-1	Time Display APE955-205-01	
APE962	GMT Clock/Elec.Chronometer Ind.	
APMK4	AP Navigator DEMO MODEL	
AR3201	VHF TX/RX	AR3201
AR4201	VHF COMM	0868.541-910
AR-850	Encoder Blind	
AS3100-1A-01	Audio Control Panel	AS3100-1A-01
ASH674-3	Inverter	
ASH674-33	Inverter Static	
ASH674-3P	Inverter	
ASI-70A	Testset f Control Panels	ASI-70A
ASNA2151-02	Actuator	
AT-10-0643-01	Handset	
AT150	Transponder	
AT206-1	Totalizer Foxboro	
AT-3000	Encoder, Altitude 30K	AT-3000
ATV-7	Antenna VXA-200/210	YAESU
AUD251H	Audio Panel	AUD251H
AUL7129-501	Detector Fire	
AVN210	VOR/LOC/GS/MKR	
AZ810	Digital Air Data Computer 700700-961	
B.E.515	Rescue Beacon , Lifewest	SARBE-6
B00331-2	Volt. Regulator 14 v. PAC484121	PAC-484121
B-10,882A	Manual, Blueprint	G-1739A
B1045-J521-RBH3	Audio Panel	990-3333-185
B210631	Governor Overspeed	
B-345LS	Contactora	
B4515210005	Altimeter, Encoding	B4515210005
B-5215	Manual, Blueprint	G-804
B692/229	Audio Control Panel	

### CAPABILITY LIST

Partnumber	Description	Type No
Blaupunkt Autoradio	San Francisco CD 70	
BR-302	G-SAT GPS Receiver Seriel	G-SAT
BU-301	G-SAT GPS Receiver USB	G-SAT
C-10,115A	Manual, Blueprint	G-1739A
C117802	Synchro Control	
C11MA-0121	Hyd. Boost Pump	
C1306	Antenna Radio Phone	
C14	Gyro	C-14
C-40	Headset	
C4000	E.L.T. Pointer	
C475-01-001	Junction Test Box	
C5120-3	Starter Motor	
C-5214	Manual, Blueprint	G-804
C661003-0501	Turn Coordinator	1394T100-7Z
C661003-0506	Turn & Bank Indicator	
C661060-0101	Air Speed Indicator	EA5171-1
C661060-0109	Airspeed Indcator	
C661071-0101	Altimeter	5934P3A-83
C661080-0101	Rate of Climp Indicator	
C668001-0106	Flap Indicator	
C-77107-6	Lift Transducer	C-77105-6
C-83017-1	Stall Warn Vane	C-83017-1
C9500-04-03A	Switch push to talk	
C9500-10-20A	Switch push to talk	
C9500-11-21A	Switch push to talk	
CB9112/CP9112	Hovedstation	
CCU65	Compensator	
CE2A22	Corrector Hor.	
CG1042AB02	Mode Selector Unit, 4	MSU
CG1042AB03	Mode Selector Unit, 6	MSU
CG1042AB04	Mode Selector Unit, 6	MSU
CG1121AB04	Command Display Unit	CDU
CG1121AB13	Command Display Unit	CDU
CG1121AB14	Command Display Unit	CDU
CG1135AC03	Inert. Sens. Display	ISDU
CG1136AC10	Inert. Sens. Display	ISDU
CG1136AC20	Inert. Sens. Display	ISDU
CG1227AC01	Mode Selector Unit	MSU
CG1227AC10	Mode Selector Unit	MSU
CG1230AC10	Lasertrak. Display Unit	NDU
CG1230AC11	Lasertrak. Display Unit	NDU
CG1230AC20	Lasertrak. Display Unit	NDU
CG1230AC21	Lasertrak. Display Unit	NDU
CG1230AG11	Lasertrak. Display Unit	NDU
CG2015AC10	Mode Selector Unit	MSU
CH127927-22A2A	Bearing	
CH31723	Igniter Champion	
CH31772A	Igniter	
CI100-3	Antenna DME Transponder	CI100-3
CI100-4	Antenna L-Band ATC/DME	CI100-4
CI100-5	Antenna L-Band ATC/DME	CI100-5
CI101	Antenna, ATC	CI101
CI102	Antenna Marker Beacon	
CI105	Antenna DME/Transponder	CI-105
CI105-7	Antenna	

### CAPABILITY LIST

Partnumber	Description	Type No
CI108	Antenna Comant	
CI1102	VOR Coupler	
CI1110	VOR Coupler	
CI1114	Coupler, Triple VOR	CI1114
CI119	Antenna VHF COMM	13" blade
CI121	Antenna Vhf-Comm	
CI121SP	Antenna Loran	stick type 18" high
CI122SP	Antenna NAV Loran	bent-whip 8.5"
CI138	Antenna Vhf Comm	Beech
CI139	Antenna Vhf Comm	Piper
CI152	Antenna Radio Altimeter	
CI157P	Antenna	
CI177	Antenna FM 148-174 MHz	2 meter FM
CI193	Antenna Glide Slope	
CI200	Antenna Vhf Comm Radio Phone	450-470 Mhz
CI236	Antenna Glide Slope Dual	int. mount
CI244	Antenna	
CI271	Antenna Radio Phone	
CI291	Antenna VHF COMM	
CI292-1	Antenna VHF COMM	
CI292-2	Antenna VHF COMM	
CI306	Antenna Radio Phone 800-900 Mhz	800-900 Mhz
CI405-2	Antenna, GPS.	KA-92
CI507	Diplexer	
CI601	Diplexer Dual Comm/Single Ant.	CI601
CIR-11-2	ELT Transmitter	CIR-11-2
CNA-2C-1	Audio Control Panel	CNA-2C-1
Corvette	Aircraft	Corvette
CP-1563A	Audio Control Panel	CP-1563A
CP1600A	Audio Panel	CP1600A
CP-1600A	Audio CTL Panel	CP-1600A
CP-1600B	Audio CTL Panel	CP-1600B
CP-1600BA	Audio CTL Panel	CP-1600BA
CP-1600C	Audio CTL Panel	CP-1600C
CP-1600D	Audio CTL Panel	CP-1600D
CP-1600E	Audio CTL Panel	CP-1600E
CP-1600EA	Audio CTL Panel	CP-1600EA
CP-1600G	Audio CTL Panel	CP-1600G
CP-1600H	Audio CTL Panel	CP-1600H
CP-1600JA	Audio CTL Panel	CP-1600JA
CP-1600AA	Audio CTL Panel	CP-1600AA
CSV1-300-105	Vacuum Capacitor	919-0288-020
CT2000	Skymap Color Tracker	CT2000
CTL-22C	VHF Control Panel 8.33 Khz	CTL-22C
CTS309E13A	Tester Yaw Damper	
CU-5209-(1)-X11	Control Unit	0506.842-910
CXL2-1/YA	Antenne med beslag	
CXL3-1LW	Antenna	
CXL70-1LW/H	Antenna basestation 420-470	
D1-112-5025	Tachometer Recording Mechanical	98480-25
D22298010	Loom Lower	
D3337LB6-1C	Radio Magnetic Indicator	D3337L-B6-1C
D463-01-001	Central Warning Light Panel	
DC10-10	Aircraft	Aircraft
DC10-30	Aircraft	Aircraft

### CAPABILITY LIST

Partnumber	Description	Type No
DC-COM 200	Intercom	40468G-01
DHC-6 Twin Otter	Aircraft, Dehaviland	
DHCSC70021-1	Volt.meter DC	
DK100	Underwater Beacon	
DK120	Underwater Beacon	6 years
DM1601354-001	Antenna ATC DME	
DM1850M	Microphone/Speaker	
DMC60-1	Antenna Com	DMC60-1
DMC60-17-1	Antenna VHF	
DMC63-3A	Antenna	
DMC70-1A	Antenna VHF/COM	
DMELT8-1	Emergency Locator Transmitter	ELT8-1
DMN23-1/C	Antenna	DMN23-1/C
DMN27-2	Antenna Marker Beacon	
DMN43-1	Antenna Marker Beacon	
DMN4-45-3	Antenna	
DMNI49-2	Antenna	
DMNI50-2	Antenna	
DMNI50-2-1	Antenna	
DMNI50-2-2	Antenna ATC	DMNI50-2-2
DMNI50-4	Antenna	DMNI50-4
DMNI70-1	Antenna	DMNI70-1
DMPN3-3/A	Antenna Radio Altimeter	DMPN3/3A
DM-Q18-2	Antenna, ELT Blade	DM-Q18-2
DN1050ZMK2	Indicator LDG Poss.	
DR3174000GA	Att. Monitor DR3174-0000-GA	
DR-80C	Headset	LEM
DU7000	Display Unit 622-8588-105	
DU880	Display Unit 4053000-901 Exch	
E17A01C-N049	Pass. Control Unit	
EA101AN19A	Indicator Fuel Qty.	
EA401A	Altimeter Encoding	
EA5171-1	Air Speed Indicator	C661060-0101
EC10X	GPS Receiver	00-45201-000
ELP362D	Underwater Beacon	Se note !
ELS-10	Battery	ELS-HM
ELT 110-4	Emergency Locator Transmitter	ELT-110-4
ELT10	Emergency Locator Transmitter	ELT-10
ELT-200	Emergency Locator Transmitter	ELT-200
ELT8-1	Emergency Locator Transmitter	ELT8-1
ELT910	Emergency Locator Transmitter	ELT910
ELT96A2560000000	Emergency Locator Transmitter	ELT-96 (AP) (AF)
ELT97A2560000000	Emergency Locator Transmitter	ELT-97
EMB10-14	Marker Antenna	
ESCORT2	COM NAV	
FA2100-1020-00	Cockpit Voice Recorder Soloid State	FA2100-1020-00
FBA-25	Batt Box VXA-200/210	VXA-200/210
FG1006AA13	TANK UNIT S345T002-139	
FL5006	Adapercable Mechanic Headset	
FL5007	Adapercable Mechanic Headset	
FL9	PTT/Adapter	
FL9-E	PTT/Adapter	
FL9E-03	Adapter incl. Spiralcord	FL5007(memo)
FL9-T	Pushbutton	
FL9-T9089	Comm Peltor	

### CAPABILITY LIST

Partnumber	Description	Type No
FM13-01	Intercom Air Narco/Icom	
FMT23	Intercom Peltor	
FN200/28V	Cooling fan w/5/8" airduct.	
FNB-V57	Batt. VXA-210 Excl. Afgift	YAESU
FP0207B	Probe Ametek	
FSG5	VHF, Radio Handheld	FSG5
FSG5W	VHF, Radio Handheld	FSG5W
FSG70	VHF Trans.	027/1 11
FSG90	Transceiver VHF/AM Dual Mode	
G-1168	ATC Transponder Control	
G-1216-1	ATC Transponder Control Panel	G-1216-1
G-1248	Annunciator	G-1248
G-1248B	Navigation Warning Annunciator	G-1248B
G-1248B-1	Light Panel	
G-1307	ATC Transponder Control Panel	G-1307
G-1333	VHF NAV/COMM Control	G-1333
G-1334	Audio Selector Panel	G-1334
G-1335	ATC Transponder Control Panel	G-1335
G-1336	Jack Box	G-1336
G-1337	SELCAL/PA Level	G-1337
G-1338	ADF Control Panel	G-1337
G-1447	ATC Control Panel	G-1447
G-1492	ATC Control Panel	G-1492
G-1518	ATC Transponder Control Panel	G-1518
G-1701A	ATC Transponder Control Panel	G-1701A
G-1707A	VHF NAV Control Panel	G-1707A
G-1717	VHF COMM Control Panel	G-1717
G-1736	ATC Control Panel	G-1736
G-1739A	VHF COMM Control Panel	G-1739A
G-1908	VHF NAV Control Panel	G-1908
G-1980A	Audio Panel	
G-1980B	Audio Selector	G-1980B
G-1981	ATC Control Panel	G-1981
G-1982	NAV/COMM Control Panel	G-1982
G-1982A	NAV/COMM Control Panel	G-1982A
G-1982B	NAV/COMM Control Panel	G-1982B
G-1982C	NAV/COMM Control Panel	G-1982C
G-1983	Selcal Control Panel	G-1983
G-1985A	COMM 3 Control	G-1985A
G-2019	SELCAL/MKR Control Panel	G-2019
G-2021	Audio Control Panel	G-2021
G-2022	Radar Control	G-2022
G-2025	Jack Box	G-2025
G-2048	Audio Control	G-2048
G21	GPS Pioneer Satelite Navigator	00-63000-000
G-2125B	Audio Sel Panel	G-2125B
G-2158C	COMM Control Panel	G-2158C
G25	GPS Colortrack	00-12015-000
G-2573B	NAV-COMM Control Panel	G-2573B
G-2584	Audio SEL/CONT Panel	G-2584
G-2599	Audio Control Panel	G-2599
G-2754	Audio Jack Panel	G-2754
G-2805	DME/Transponder Control Panel	G-2805
G2905-24	Pwr. Unit	
G-2933	VHF COMM Control Panel	G-2933

### CAPABILITY LIST

Partnumber	Description	Type No
G-2964	NAV/COMM Control Panel	G-2694
G-3006	NAV Control Panel	G-3006
G-3009	SELCAL Control Panel	G-3009
G-3122C	Interphone Amplifier	G-3122C
G3159	VHF Controller	G3159
G-3159	COMM 3 Control Panel	G-3159
G-3164A	Audio Control Panel	G-3164A
G-3177	DME Control Panel	G-3177
G-3180	HF Control Panel	G-3180
G-3181	Frequency Chart	G-3181
G-3261A	Altitude Warning Sys.	G-3261A
G-3424	ATC Transponder Control Panel	G-3424
G-3425	P. A. Amplifier	G-3425
G-3425A	P. A. Amplifier	G-3425A
G-3440(A)	Cockpit Speaker	G-3440(A)
G-3501	Selcal Control Panel	G-3501
G-3752	ATC Control Panel	G-3752
G3800-A3	Ldg. Light	
G-3803	Isolation Amplifier	G-3803
G-3803( )	Isolation Amplifier	G-3803( )
G-3805	Interphone Amplifier	G-3805
G-3816A	ATC Control Panel	G-3816A
G-3951	COMM Control Panel	G-3951
G-3954	ADF Control Panel	G-3954
G-4026	VHF COMM Control Panel	G-4026
G-4026A	COMM Control Panel	G-4026A
G-4060	HF Control Panel	G-4060
G-4103	NAV/COMM Universal Control Panel	G-4103
G-431	ADF Panel	G-431
G-432	NAV Audio Panel	G-432
G-433	VHF COMM Panel	G-433
G-434	Observes ADF Control	G-434
G-4343	CALSEL Encoder	G-4343
G-4345	Audio Control Panel	G-4345
G-4345A	Audio Control Panel	G-4345A
G-4433A	ADF Control Panel	G-4433A
G4434A	VHF Control Panel	G4434A
G-4434A	COMM Control Panel	G-4434A
G-4436A	ATC Control Panel	G-4436A
G-4451	ATC Control Panel	G-4451
G-4452	VHF COMM Control Panel	G-4452
G-4453A	NAV Control Panel	G-4453A
G-4507A	Avionics Control Panel	G-4507A
G-4518	NAV/DME Control Panel	G-4518
G-4533B	Avionics Control Panel	G-4533B
G-4578	NAV Control Panel	G-4578
G-459	Master Radio Control	G-459
G-475	Audio Selector Control	G-475
G-4773	NAV/COMM Control Panel	G-4773
G-4804	Control Panel	G-4804
G-4817	Dual COMM Control Panel	G-4817
G-4945A	GND. PROX. Warning	G-4945A
G502A	Gyro Directional 1U-262-005-20	
G-5146	COMM Control Panel	G-5146
G-5152	NAV/COMM Control Panel	G-5152

### CAPABILITY LIST

Partnumber	Description	Type No
G-515B	Cockpit Speaker	G-515B
G-515BA-2	Cockpit Speaker	G-515BA-2
G-5178	ADF Control Panel	G-5178
G-5179	ADF Control Panel	G-5179
G-5392F	COMM Control Panel	G-5392F
G5393B	Control Panel	G5393B
G-5394	COM CTL	
G-5434A	COMM Control Panel	G-5434A
G-549	Flight Director Control	G-549
G-5515	Cockpit Speaker	G-5515
G5515P	Speaker	G5515P
G-5708A	NAV/COMM Control Panel	G-5708A
G57NB5	Collar Anti Reset	
G-5810A	NAV Control Panel	G-5810A
G-5937	Audio Control Panel	G-5937
G-5938	ATC Control Panel	G-5938
G-5941	COMM Control Panel	G-5941
G-5942	COM CTL	G-5942
G-5942A	COMM Control Panel	G-5942A
G-5943	Intercom Select Panel	G-5943
G-5951	Audio Control Panel	G-5951
G-5951B	Audio Control Panel	G-5951B
G-6000	Avionics Control Panel	G-6000
G-6018	Remote Datum Selector Panel	G-6000
G-6075-06	Audio Control Panel	G-6075-06
G6076	VHF Comm Control Panel	G6076
G-6076	COMM Control Panel	G-6076
G6076-05	VHF Comm Control Panel	G6076
G-610	Intercom. AMP. Transistorized	G-610
G-6101	Audio Control Panel	G-6101
G-610-1	Intercom. AMP. Transistorized	G-610
G-610-11	Intercom. AMP. Transistorized	G-610
G-6107A	Amplifier Box	G-6107A
G-6137A	Audio Control Panel	G-6137A
G-6200-06	COMM Control Panel	G-6200-06
G-6201	HF Control Panel	G-6201
G-6206	ATC Control Panel	G-6206
G-6206-02	ATC Control Panel	G-6206-02
G-6206-03	ATC Control Panel	G-6206-03
G-6206-04	ATC Control Panel	G-6206-04
G-6206-05	ATC Control Panel	G-6206-05
G-6206-06	ATC Control Panel	G-6206-06
G-6206-07	ATC Control Panel	G-6206-07
G-6206-10	ATC Control Panel	G-6206-10
G-6206-13	ATC Control Panel	G-6206-13
G-6206-14	ATC Control Panel	G-6206-14
G-6206-15	ATC Control Panel	G-6206-15
G-6206-17	ATC Control Panel	G-6206-17
G-6206-19	ATC Control Panel	G-6206-19
G-6481	NAV / DME Control Panel	G-6481
G6481-01	Control Panel NAV	G6481-01
G-6560	Panel Gables	G-6560
G-6773	VHF NAV/DME Control Panel	G-6773
G-6773-02	VHF NAV/DME Control Panel	G-6773-02
G6773-02	VHF NAV Control Panel	G6773-02

### CAPABILITY LIST

Partnumber	Description	Type No
G-6773-03	VHF NAV/DME Control Panel	G-6773-03
G-6773-04	VHF NAV/DME Control Panel	G-6773-04
G6773-04	VHF NAV Control Panel	G6773-04
G-6931-01	Audio Control Panel	G-6931-01
G-6931-02	Audio Control Panel	G-6931-02
G-6931-04	Audio Control Panel	G-6931-04
G-6931-05	Audio Control Panel	G-6931-05
G-6968	Audio Control Panel	G-6968
G-708-1	Interphone Amplifier	G-708-1
G-715	Audio Panel	G-715
G-716V	VHF-COMM / NAV Panel	G-716V
G-717V	HF Control Panel	G-717V
G720082-5	Fuel Control Valve	
G-720V	VHF-COMM 3 / SELCAL Panel	G-720V
G7400-06	VHF COM Panel	G7400-06
G7400-12	VHF Comm Control Panel	G7400-12
G7400-15	VHF CTL Panel	G7400-15
G7400-23	VHF Comm Control Panel	G7400-23
G7400-30	VHF Comm Control Panel	G7400-30
G-803	Isolation Amplifier	G-803
G-804	Audio Control Panel	G-804
G-806B	VHF / VOR Control Panel	G-806B
G-806D	NAV / COMM Control Panel	G-806D
G-807B	WX Radar Control Panel	G-807B
G-809	ADF Control Panel	G-809
G-825	Tape Reproducer	G-825
G-825D	Tape Reproducer	G-825D
G-826A	Loran Control	G-826A
G-831	Flight Reference Selector	G-831
G8400A37-24	Beacon Rot. Grimes	
G-861V	VHF/VOR Control Panel	G-861V
G-861VB	COMM/NAV Control Panel	G-861VB
G-862	Audio Control Panel	G-862
G-864A	RDR-IE Radar	G-864A
G-902	HF Control Panel	G-902
G-922	Microphone Selector	G-922
G-924	Audio Control Panel	G-924
G-926	VHF/VOR Control Panel	G-926
G-927	Radar Control Panel	G-927
G-930B	Tape Reproducer	G-930B
G-931D	Power Supply Component	G-931D
G-932D	Relay Control Unit	G-932D
G-933	VHF COMM/HF Control Panel	G-933
G-934	Audio Selector Panel	G-934
G-982	INSTR. Switching Assembly	G-982
GA100-0000	Cockpit Voice Recorder	GA100-0000
GA150-0000	Control Kit	GA150-0000
GA26	Antenna Low Profile GA26	GA26
GA27	Antenna Low Profile	GA27
GA56	Antenna 1527-01T /010-10040-01	
GAH-2247	Accelerometer	GAH-2247
GK415/AR4201SYST	Ground Station w/ant.and manual	0884.561-923
GK-415-1	VHF Tranceiver AR4201/GK415	0889.997-923
GM350A2	RADIO 136-174 MHz	
GM350-A2	Radiosystem 136-174 MHz	

### CAPABILITY LIST

Partnumber	Description	Type No
GM900	FM Mobil Radio	
GM950	Base Mobil 403-470 MHz	MO8RHF6AN3AN
GNS-500A	CDI 10070-1	GNS-500A
GOODWOOD	Headset AVIA 2000	
Goodwood ANR	Headset, Electronic Noise Canceling	
GP340	Radio Mobile 403-470 MHz	MDH25RDC9AN3-E
GPS-100	GPS Receiver	GPS-100
GPS100PRT-02	GPS100 010-00057-05	
GPS155TSO	GPS Int'l w/Ant. GA56	
GPS165TSO	GPS165 TSO System	
GPS195	GPS w/Moving Map	
GPS25-LP	See alt. p/n	
GPS295	Brug p/n 010-00200-01	
GPS45	GPS	???
GPS89	GPS89 World Wide Database	GPS89
GPS92	bestil 010-00168-02	GPS92
GPS95	GPS	AVD + XL
GPS95STD	GPS Without Jeppesen & XLDISPL	
GPS-95XL	GPS Receiver, Handheld	GPS-95XL
GT501-30A	Inverter	
H10-13-4	Headset	
H10-13-4MOD	Headset (Modified)	
H10-13X	Headset Noise Canceling	40411G-06
H10-20TM	Headset	12507G-29
H10-30	Headset	
H10-40	Headset	12508G-26
H10-56	Headset Helicopter	18283G-02
H10-60	Headset	12507G-31
H10-76	Headset Low Impedance	12510G-21
H10-80	Headset	
H10-86	Headset	
H150AKM1	Attitude Indicator	
H20-10	Headset 40495G-1	40495G-01
H20-10XL	Headset ANR System	40495G-03
H301BDM1	Horizon	
H3312	Headset	
H3330	Headset	
H341AGM1	Horizon Ind. St.By	
H3530	Headset	
H7F	Hearing Protector	
HB100	Frequency Changer	HB100
HG2030AD09	Air Data Inertial Ref. Unit	HG2030AD09
HG2030AD10	Air Data Inertial Ref. Unit	HG2030AD10
HG2050AC02	Air Data Inertial Ref. Unit	HG2050AC02
HG2050AC03	Air Data Inertial Ref. Unit	HG2050AC03
HG2050AC04	Air Data Inertial Ref. Unit	HG2050AC04
HG2050AC05	Air Data Inertial Ref. Unit	HG2050AC05
HG7502AC02	Radar Altimeter	HG7502AC02
HME 45-CA	Headset	045-250-025
HR,CFA-14/28-D	Strobe Light	
HR100	VHF-AM Handheld Transceiver 118-136,975 MHz	0879.037-917
HS51	Headset	
HT9000	NPU 81844-01-003A	
HTB7A	Headset	
IC-707	HF Radio	IC-707

### CAPABILITY LIST

Partnumber	Description	Type No
IC-718	HF Radio	IC-178
IC-A110E	Fixed A/C Radio	
IC-A2	Receiver Handheld	
IC-A20	Receiver VHF Air Band	
IC-A200	Transceiver VHF	Ej godkendt i DK
IC-A20MK2	Transceiver Handheld	
IC-A22	Out of production	
IC-A22E	Transceiver Handheld/VOR	
IC-A23	Transceiver Handheld/VOR	
IC-A3E	Transceiver Handheld	830200
IC-A4E	Transceiver Handheld	830400
IC-A5E	Transceiver Handheld	830700
IC-AT100	Autotuner	
IC-M1EuroV	VHF portable Marine	IC-M1EuroV
IC-M1V	Icom Marine VHF=se IC-M1EuroV	
IC-M59E	Marine Radio 25 W	
IC-M7	Transceiver Handheld	IC-M7
IC-OPC752	Headset Adapter Cable IC-A4E	
IC-OPC-871	Adap. Headset A110E	
ID825	ILS / VOR Indicator	ID-825
ID-825A	ILS / VOR Indicator	ID-825A
IN2025B	Radar Indicator	IN-2025B
IN2041	Indicator VOR/LOC	
IN244A	Indicator VOR/LOC	
INA51A	Radio Alt. Ind. 2067635-0703	
JET CALL-5	SELCAL	2800-0012-105
K1266	DME Indicator	
K6AM1	Module Altitude	
KA0091	Antenna GPS	KA91
KA122	Amplifier DME Hold	071-1085-00
KA33-01	Cooling Blower 28V	
KA39	Voltage Converter 071-1041-01	
KA52	A/P Adapter	071-1055-00
KA58	DME Hold Adapter	071-0016-00
KA60	Antenna ATC / DME	KA-60
KA91	Antenna GPS	KA91
KCA-0104W	Standby Compass	KCA-0104W
KG102A	Gyro Directional	KG-102A
KI225	Indicator ADF	KI-225
KI266	Indicator DME	KI-266
KingAir-200	Aircraft	KingAir-200
KLN0900-31	GPS DZUS BRNAV Syst. Black w/KA91	KLN-900-31
KLN90B	GPS 14/28v 066-4031-2421	
KLX100	GPS COMM INTL 070-1031-01	
KMD-850-03	Multifunction Display Blk	KMD-850
KMD-850-13	Multifunction Display Gry	KMD-850
KMD-850-23	Multifunction Display Sc	KMD-850
KN62A	DME 066-1068-01	
KNI520	Indicator NAV	KNI-520
KR22	Marker Beacon Receiver	
KSSU 704620	Magazine, Flight Data Rec.	KSSU 704620
KT0076A-11	Transponder 28v / KA60	KT-76A-11
KT76	Transponder ATC	KT-76
KT76A	Transponder ATC	KT76A-01
KT-76C-00	Transponder System all incl.	

### CAPABILITY LIST

Partnumber	Description	Type No
KTS143	Digital Test System Gold Crown	
KWX-56-01	Radar Set	KWX-56-01
KWX-56-03	Radar Set	KWX-56-03
KX99	Portable VHF TX/RX	KX-99
L10-16	Antenna ATC	L10-16
L10-601	Antenna L-Band ATC/DME	L10-601
L13471-00	Water Boiler	1010099-6
L16999-14H	Valve Gasper	
L-5362B	Magnetron	4004505-0001
LBB1205/00	Casetteplayer Phillips	
LT52A	Light Dimmer Supply	
LT-55	Light Dimmer	LT-55
M01KHK9AN38N	Radio	MR304B
M1035J-2AB	Audio System	
M1035AAAB-JLB2	Audio Control Panel	
M1035AAAA-BQD2	Audio Control Panel	
M2651-133-31	Toilet Fitting	V2651J206P01
M4950-05	Audio	
M811B	Clock Digital	
MA300H	Battery	MA300H
MASCOT9123	Mascot 12v dc 1,0A	
MASCOT9986	Inverter	
MB	Ground Station	Mentor
MCM-330	ELT Dual Frq MCM330	
MD40-42L	Indicator Course Deviation	
MD40-66L	Indicator Course Deviation	
MD40-66L28	Indicator Course Deviation	
MD40-68L	Indicator Course Deviation	
MD41-1208	Annunciator Control Unit	MD41-1208
MD41-428	Annunciator Control Unit	MD41-428
MD41-628	Annunciator Control Unit	MD41-628
METRO	*** pn forkert se pn: MB	MB Groundstation
MF10-02-01	Mask Regulator	
MF259.51.1	Print Card	
MF259.53.1	Print Card	
MH4-Z-PISK	Antenna Mobile 160 MHz	
MHD-MN9052A	Mic/Speaker Combination	
MI-585000	RMI Converter	AVI-200
MI-585009	Radar Transceiver	AVQ-21
MI-585011-1	Radar Indicator	AVQ-21
MI-585011-2	Indicator Radar	AVQ-21
MI-585011-3	Indicator Radar	AVQ-21
MI585019	ATC Transponder	AVQ-95
MI-585019	ATC Transponder	AVQ-95
MI585073	NAV REC	AVN-220A
MI-585073	VHF Nav Receiver	AVN-220A
MI-585134-3	Radar Indicator	Primus-40WX
MI-585135-1	Radar R/T	Primus-40WX
MI585161	Radar Transceiver	Primus-90
MI-585161	Radar Transceiver	RT-9001
MI-585162-2	Radar Indicator	DI-9001
MI-585164-1	Radar Antenna	Primus-90WXD
MI585164-1	Radar Antenna Pedestal	AP-9001
MI-585164-4	Radar Antenna	AP-900B
MI585166	Mounting Tray	

### CAPABILITY LIST

Partnumber	Description	Type No
MI-585182	Radar TX/RX	Primus-50WX
MI-585183	Radar Indicator	Primus-50WX
MI-585198	Radar Antenna	Primus-50WX
MI-585200	Radar Transceiver	RT-4001
MI-585201-1	Radar Indicator	DI-4001
MI-585202	Antenna Pedestal	AP-4001
MI-585202-1	Antenna Pedestal	AP-4001
MI-585202-2	Antenna Pedestal	AP-4001
MI-585202-3	Antenna Pedestal	AP-4001
MI-585222-1	Radar Transceiver	RT-3002
MI-585224	Radar Antenna	AP-3001
MI585226	Radar Indicator	DI-9003
MI-585226-2	Radar Indicator	DI-900B
MI585227	Panel	
MI585229	Radar Control TMG	TC9001
MI-585255	Radar Transmitter & Antenna Assy	WU-1001
MI-585256	Radar Indicator	DI-100X
MI-585264	Radar Transmitter & Antenna Assy	WU-1002
MI-585277	Radar Indicator	DI-2007
MI-585281-3	Controller, Master	Primus-90B
MI-585300-6	Radar Transceiver	RT-900B
MI-585342	Radar Indicator	DI-4002
MI-585343	Radar Indicator	DI-4002
MI-585343-1	Radar Indicator	DI-4002
MI-585353	Antenna Pedestal	WA-800
Mi-585353-1	Antenna Pedestal	WA-800
MI-585354	Antenna Pedestal	WA-800
MI-591029-5	Radar Indicator	AVQ-20
MI-592019	ATC Transponder	AVQ-65
MI592181-5A	Audio Pnl AVA-310	AVA-310
MI-592181-6	Audio Panel AVA-310	AVA-310
MI592181-6	Audio Panel AVA310	AVA-310
ML-2CXP4R	Antenna Mobil	ML-2CXP4R
MS25488-27	Connector, Ground Power	
MS29526-2	Cap Fuel	
MT22H7F-01	Headset	
MT22H7F-03	Headset 7004-ANR	7004
MT32H7F-01	Headset f/Helicopter	
MT32H7F-06	Headset f/Helicopter	
MT72H7A78-VI	Headset Rally	
MT72H7F	Headset	
MT72H7F-01	Headset	
MT9	Microphone Strube	
MX170B	NAV COM Radio	
N1335A	Selcall	
N1401C	Selcall	
NA135	Selcal Decoder	NA135
NAV 111	Nav Receiver	NAV 111
NAV 112	Nav Receiver	NAV 112
NAV-111	Nav Receiver	NAV-111
NC-77B	Charger Standard	YAESU
NR2029	NAV Radio	
NR3301-(S)	VOR/LOC Receiver	
P2-07-0003-001	Flash Light Emergency	
P4-01-0021	Power Supply for Flash Light	

### CAPABILITY LIST

Partnumber	Description	Type No
PA2010A	Ear Set with Boom Mic	
PA300/BP100	Speaker FSBP100/AMPL.FSPA30024	
PAC-484121	Volt.Regulator 14v B00331-2	B00331-2
PAE5610	COM PAE	
PC-125	Inverter, Static	PC-125
PC-125-123B	Inverter, Static	PC-125-123B
PC-125-123C	Inverter, Static	PC-125-123C
PC125-12B	Inverter, Static	PC125-12B
PC-125-2A	Inverter, Static	PC-125-2A
PC-125-3A	Inverter, Static	PC-125-3A
PC-125-4A	Inverter, Static	PC-125-4A
PC-125-9A	Inverter, Static	PC-125-9A
PC-125A	Inverter, Static	PC-125A
PC-15	Inverter, Static	PC-15
PC-15A	Inverter, Static	PC-15A
PC15B	Static Inverter	
PC-15B	Inverter, Static	PC-15B
PC15BC	Inverter Static	PC-15BC
PC-15C	Inverter, Static	PC-15C
PC-15D	Inverter, Static	PC-15D
PC-15E	Inverter, Static	PC-15E
PC-15F	Inverter, Static	PC-15F
PC-15G	Inverter, Static	PC-15G
PC-19	Inverter Static	PC-19
PC19-93	Inverter Static	PC19-93
PC350	Inverter	
PC350-2A	Inverter Static	
PC620-0059	Fuel Comp	
PCA	FLYMODTAGER INCL AKK/HØJT/JACK	
PG1152AC03	A.D.Module	
PI3001	Antenna Ext. w/Cable, f/Pointer 3000	
PPI-1D	Radar Indicator	PPI-1D
PV1597A	FDR Test Set	
PAA574-2	Probe Fuel	
R4101-2	Actuator	
R446A	ADF W/IN346A IND/L346A ANT.	
R528	Receiver Aircraft Band	Signal Comm.
RC06	Control Remote Blaupunkt	TMC 148
RCU-J	Remote Control Box	
RDAV3006-01	Video System	
RDAX6555-E1	D.P.C.U.	
RDAX6556-E2	PCU	
RD-AX7001-01	Tape Reproducer	
RDAX7308-01	Tape Reproducer	
RD-AX7351	Tape Reproducer	RD-AX7351
RESCUE-99	Beacon 607690-1	
RNA26C	NAV Receiverf 2067593-2653	
RT1301B	Radar Transceiver 4000966-0109	
RT131A	Radar Transceiver 4000763-3101	
RT300	Radar Transceiver	RT-300
RT3209-(11)	Transceiver 10 Watt	0505.668-910
RTA476A	DME w / Indicator	
RX406-2	Homer	
S11	Battery Pack Nicad w/Charger Magellan	f/EC-10X GPS
S1305-7	Tachometer Recording Mechanical	D1-112-5025

### CAPABILITY LIST

Partnumber	Description	Type No
S1392N2	Indicator Vertical Speed	7000C-31
S200-0012-00	CVR Solid State	
S210W003-7	Fan Assy	
S220T116-1	Antenna ATC	
S224-3	Turn & bank Indicator	
S253T405-4	Indicator Stab. Trim	
S256U001-3	Switch Trailing Edge	
S283T001-11	Anti Skid Control	
S283T002-6	Transmitter Oil Press	
S283T-003-1	Flight Data Recorder	SSFDR
S332T006-13	Transmitter Oil Qty	
S35-1000-1	Antenna Marker Beacon	
S40	Headset	
S41422	Antenna, Glideslope	S41422
S451T201-7	Cargo PDU	
S65-147-3	Localizer (repl.by -7)	S65-147-3
S65-147-7	Localizer	S65-147-7
S65-5366-10L	Antenna L-Band ATC/DME	S65-5366-10L
S65-5366-2L	Antenna L-Band ATC/DME	S65-5366-2L
S65-5366-4L	Antenna	S65-5366-4L
S65-5366-7L	Antenna L-Band ATC/DME	S65-5366-7L
S65-8280-24	Antenna	S65-8280-24
S67-1575-133	Antenna, GPS	S67-1575-133
S67-1575-20	Antenna, GPS	S67-1575-20
S67-2002-18	Antenna, Radio Altimeter	S67-2002-18
S67-2002-29	Antenna, Radio Altimeter	S67-2002-29
SC-12	RMI Converter	SC-12
SC2300	Database EUR V1.0+	
SC2700	Database ATI V1.0+	
SE40L041VGG2	Airspeed Transducer	
SGB-A693/1	Interphone Amplifier	SGB-A693/1
SI-100A	Inverter 400Hz 3ø	SI-100A
SI-100B	Inverter 400Hz 1ø	SI-100B
SKYBLAZER	GPS	
SKYMAP	Skyforce Skymap	
SKYSTAR	GPS 00-42011-000	
SM2000	Skymap II System	GPSSkymap II
SM2000X	Skymap II System Refurbished	GPSSkymap II
SM2202	Mount Rack	Skyforce III
SM2300	Database EUR V.4.0	GPSSkymap II
SM4000	Skymap IIIC System	GPSSkymap III
SN-10	Elec. Variometer	Ilec SN10
SPA400	Intercom	
SPO22	Transcom	
SPO-42	Intercom 4 Plug Batt. Pwr.	
SSD120-30	Encoder Solid State 30K	SSD120-30
SSD120-42AE	Altitude Encoder 42K	SSD120-42AE
SSD120-42DX	Solide State Alt. Digitizer	SSD120-42DX
SSD120-50DX	Digitizer Altitude Encoder	SSD120-50DX
ST3100-23-10	Handset 0843.751-921	
SU-1	Sensor Unit Barometric	VXA-210
SVO65	Primary Servo 622-5734-002	
TA7900	CDU 159710-0101-006	
TELDIX COPILOT	COPILOT U/GPS	Demo model
TG264	Base station	

### CAPABILITY LIST

Partnumber	Description	Type No
TG460-05	Basestation 881-902-926	
TG-460-10	Groundstation	0881-910-926
TNL2000	GPD 2000 Approach Plus	
TNL2101	I/O Approach Plus Syst./H.S.Ant	
TNL2101EXCH	GPS TNL2101 I/O PLUS EXCHANGE	
TP3100-1	Tape Reproducer	TP3100-1
TP3100-1-02	Tape Reproducer	TP3100-1-02
TP3100-2A	Tape Reproducer	TP3100-2A
TR2000	Skyforce Tracker II	
TR4000	Skymap Tracker IIIC	TR-4000
TR-A101	DX Radio 835 w/Ant/Cable/Mic.	
TSG240-12B	Inverter Board	TSG240-12B
TSG420-103	AC Inverter	TSG420-103
UC-14-28	Converter 14 to 28 volt	UC-14-28
VC169	Control Panel div	VC169
VC-169C	Nav Control Panel	VC-169C
VC-169TD	VHF NAV Frequency Selector	VC-169TD
VC5250XPM25PS	DME Control Panel	VC5250XPM25PS
VCA10	Antenna, VHF	VCA10
VHF-22A	VHF conv.to ""C"" 8,33KHz	VHF-22A
VIR30A	Receiver	VIR-30A
VIR351	VHF NAV	VIR-351
VOA8	Indicator Converter	
VSDL-OC410A	Fan Indicator	
VXA-200	***** BRUG NYT P/N VXA-210	VXA-200
VXA-210	Transceiver Handheld w/VOR	VXA-210
WXT250A	Radar Transceiver	WXT-250A
Z-mount	Antenne fod FME incl bnc,kabel,skrue	
AA15504-11-005	Central Audio Unit	
AA3801-2	ADF Receiver	AA3801-2